


# User Instructions for ClicSeal Lid

## To Attach Lid To Can:

1. Insert Paddle into the middle of the can
2. Push down on top of the lid firmly
3. You will hear 4 “clicks”
4. Look to make sure all 4 teeth have engaged the bottom of the paint can chime

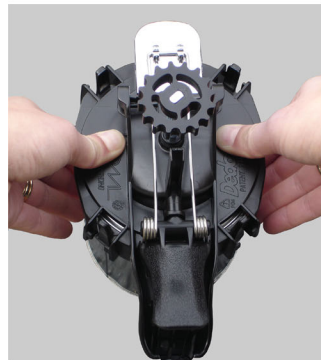

## To Remove Lid From Can:

1. Pull the rear tabs back while lifting slightly
2. Once rear teeth are disengaged from the can chime, push front tabs while lifting to release the lid from the can

