



# ClicSeal Lid Instructions

## Assembly Instructions for ClicSeal Mixing Lid

### Attaching the mixing lid to the can

- Insert the paddle inside the paint can.
- Firmly, push down on the top of the mixing lid (Figure 1).
- You should hear four "click" sounds.
- Look down, onto the top of the lid body to validate all four teeth have engaged the outside rim of the can chime.

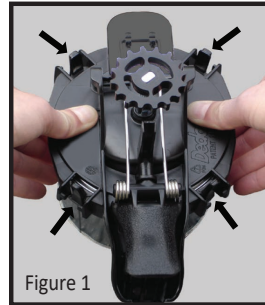


Figure 1

### Removing the mixing lid from the can

- Push the rear tabs toward the back of the can while lifting the lid slightly. (Figure 2)
- Once the rear tabs are disengaged from the chime, push the front two tabs toward the front of the can while lifting the lid slightly (Figure 3).
- When all tabs disengaged from the chime, remove the lid from the can.

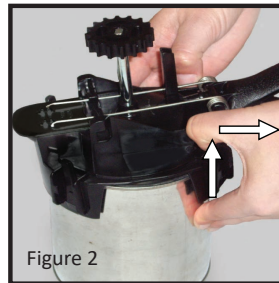


Figure 2

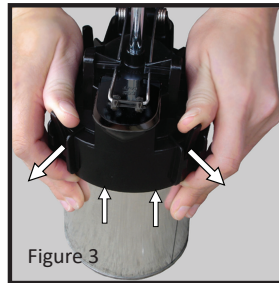


Figure 3

### P# M0063 - Half Liter Tower Instructions

When utilizing the lid for half liter cans simply place the provided tower extension over the current tower as shown in Figure 4. The tower extension prevents half liter cans from moving on the shelf during the mixing operation.

It is not needed for lids used on cans other than the half liter.


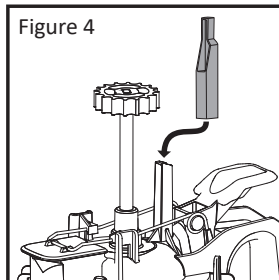


Figure 4

### P# 5326 Replacement Gear Adapters

### P# 5291 Replacement Fork Adapters

Dedoes recommends placing a small drop of non-silicone adhesive, such as CA glue, to each of the flats on the shaft before pressing the adapter onto the shaft. The lid/paddle should be removed from the paint can prior to attachment to avoid damage to the paint can.

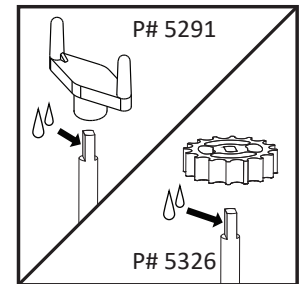

### P# M0011X ClicSeal Gallon Lid Replacement Gaskets

- Carefully pry along the bottom edge of the lock ring to loosen it. See Figure 5.
- Pull up on the lock ring to remove and then remove the plastic gasket below. See Figure 6.
- Ensure that the white foam backer ring that was below the gasket is not damaged and is installed down onto the underside of the lid.
- Place the replacement plastic gasket so that the small flange on the upper side of the seal ring sits completely over the raised ring on the underside of the lid.
- After the gasket is in position, place the lock ring down into the inside diameter of the gasket. Press firmly until it snaps into place and the flange on the top of the lock ring is flush with the seal and the bottom of the lock ring is flush with the lid. See Figure 7.

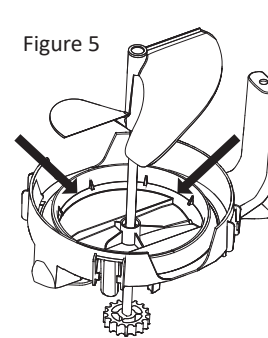


Figure 5

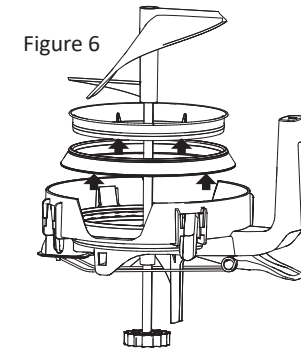


Figure 6

Figure 7

Black Plastic Locking Ring

Clear Plastic Gasket

Foam Backer Ring

Interior Lid Body

