




*** Before any service to the machine, turn power off at the breaker ***

Installation: The new programmable timer uses the same connection as the prior timer. Simply unplug the old timer if you have one and replace it with the new model. The new timer wire has a three pronged plug that seats within the plug from the motor. Be sure these are snapped together and firmly connected. Then clip the timer assembly over a tube on the right front side of the machine at the desired height. Restore power and set the date and time to begin.


Before Use: You MUST set the date and time before the timer will operate. If power is ever lost to the Timer, the date and time must be set before continuing to use. The timer will not function without date and time set.

Set Up: Set Date and Time

When powered on, the timer will prompt to set the date and time. **SET DATE AND TIME**

Hold SET to begin and use the arrows on the buttons to navigate the display. Use SET to select an option and move to the next choice. 

Standard function: Simply press 3, 15, or 30 for a cycle at any time even between programmed cycles.

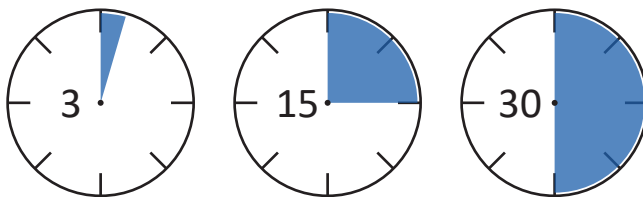

Set programmed On/Off cycle time:

Hold SET and choose PROG1 or PROG2.
Choose a time of day and press SET to confirm.
The timer will now start and run every day during the time chosen.
The programmed time is always a 30 minute cycle, after which it will turn itself off.

- During operation the red LED above the time/program will flash.
- Press the **RED** button to **STOP** the machine at anytime during operation.
- Cans with a mix lid **can** be removed or added to the machine during a cycle.

CAUTION:
THE TIMER WILL **NOT** GIVE WARNING BEFORE
IT STARTS A PROGRAMMED CYCLE!

Before any service to the machine turn power off at the breaker.

