

CAUTION: THE TIMER WILL NOT GIVE WARNING BEFORE IT STARTS A PROGRAMMED CYCLE!
***** Before any service to the machine, turn power off at the breaker *****

Installation: The new programmable timer uses the same connection as the prior timer. Simply unplug the old timer, if you have one, and replace it with the new model. The new timer wire has a three pronged plug that seats within the plug from the motor. Be sure these are snapped together and firmly connected. Then clip the timer assembly over a tube on the right front side of the machine at the desired height. Restore power and set the date and time to begin.

Before Use: You MUST set the date and time to operate the timer. The timer will not function without the date and time set.

IMPORTANT: If power is lost to the Timer, the date and time must be set again before continuing to use.

Set Date and Time

When timer is powered on, press and hold **SET** button for 2 seconds.

SET - Data/Time
PROG1 PROG2

Press **SET** button to open **DATE: YY/MM/DD**
TIME: HH/MM/SS AM


Use **PROG 1** **PROG 2** arrow keys to navigate to the underlined value and **↑** **↓** to change value.

After setting date, press **PROG 2** to advance to the TIME line.

Use **PROG 1** **PROG 2** arrow keys to navigate to the underlined value.

Use **↑** **↓** to adjust the time (hours, minutes, and seconds).

Press **SET** to save changes.

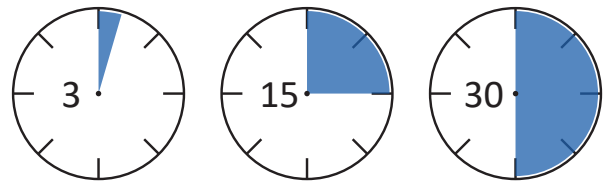

Now you can use the timer.

Standard function:

Press the 3, 15, or 30 minutes buttons to start and run the machine, even between programmed cycles.

Press the **RED** button to **STOP** the machine at anytime.

Set Program (Date & Time must be set first)

Press and hold the **SET** button for 2 seconds. The **SET - Data/Time**
PROG1 PROG2 will appear.

Select **PROG 1** or **PROG 2** to set the programmed start time.

Use **PROG 1** **PROG 2** arrow keys to navigate to the underlined value use **↑** **↓** to set the desired time, including AM or PM.

Use **↑** **↓** to navigate to "ON" option in the last field to activate the program.

Press **SET** to save changes.

The machine will run for 30-minute cycle at the programmed start time, then turn off automatically.