

THRIFT-O-MATIC SIXTEEN GALLON MIX MACHINE

WIDTH: 177 cm / 70 in
HEIGHT: 76 cm / 30 in
DEPTH: 22 cm / 9 in
WEIGHT: 58 kg / 125 lbs
PART #: 016040-T

THRIFT-O-MATIC EIGHT GALLON MIX MACHINE

WIDTH: 176 cm / 70 in
HEIGHT: 41 cm / 17 in
DEPTH: 22 cm / 9 in
WEIGHT: 36 kg / 80 lbs
PART #: 008040-T

The TOM Machine is designed to run a **MAXIMUM of TWO HOURS** per day or **Half Hour** continuously.

Premature wear or damage of the machine will occur if it operates for longer than the suggested run time.

It is recommended to have each Thrift-O-Matic Mix Machine hard wired to its own electric circuit within its location. Please contact your local certified electrician for more information.



Thrift-O-Matic Mixing Machine Motor

The Thrift-O-Matic Mixing Machine motors are 3/4 hp, single phase, 115 volt, 60 Hz with 8.7 FLA (1050 Watt).

These motors are explosion proof, rated for Class 1, Div. 1, Group D, hazardous locations. The motors are cULus approved. The motor is controlled by an intrinsically safe electronic timer that operates on 5 volts DC. There are two wires coming out of the motor which must be hard wired to the power supply. Installation of the motor to the power supply and other electrical connections must conform to all federal, state, and local regulations and must be performed by a fully qualified electrician.

Dedoes U.S.

Headquarters
1060 W. West Maple Rd.
Walled Lake, MI 48390

Support & Sales

248-624-7710
info@dedoes.com
www.dedoes.com

Thrift-O-Matic Machine

Set Up and User Guide

THIS MACHINE IS DESIGNED TO OPERATE A MAXIMUM OF TWO HOURS PER DAY or half an hour continuously. Premature wear or premature damage of the machine will occur if the machine runs longer than the maximum limit and will void the warranty.

SAFETY PRECAUTIONS

This machine is intended for use by trained professionals in industrial work areas where public and incidental access is prohibited.

1. OSHA approved eye protection must be worn when operating equipment.
2. Gloves must be worn when handling parts because the edges may be sharp.
3. Keep hands and loose clothing away from moving parts.
4. Disconnect electrical power before performing any service on this machine.
5. Do not pick up the cans by the fork adapters.
6. Examine each can before placing them on the machine. The paddle must turn freely. Dented cans may result in premature wear, leakage, or spills.
7. All operators must read this manual to be aware of the proper use of the machine and all of its caution markings.

MACHINE SET UP

The Dedoes Eight Place Thrift-O-Matic Mixing System comes fully assembled and the required electrical hook up is ready for use. The system should be located on a level surface in a convenient, well lit area. The mixing equipment is assembled with lock nuts and bolts. Simply connect the timer bracket to the lower left side panel using the wing nut and bolt as shown in the part drawing. It is important that all nuts and bolts are inspected before use as some may have become loose during transit.

ELECTRICAL INSTALLATION

There are two wires coming out of the motor which must be wired to the power supply by a certified electrician. Power supply and other electrical connections MUST conform to all federal, state, and local regulations and MUST be performed only by a fully qualified electrician. All electrical connections MUST comply with local fire codes. Dedoes assumes no liability if improper wiring is not completed by a certified electrician. Dedoes RJ Thrift-O-Matic Machines are equipped with a 3/4 HP, Single Phase, 115V, 60 Hz., explosion proof, cULus (Class 1, Div. 1, Group D) motor. All motors come from the factory wired for 115V service.

IMPORTANT: CONDUIT FOR HAZARDOUS LOCATIONS MUST BE USED.

MACHINE BREAK IN

After the machine is completely installed and before placing the paint on it, run the system for approximately thirty minutes. Pay close attention to the machine during this time to be sure it is operating correctly. Afterward, check and adjust the belt tension if necessary. (See Maintenance for reference)

1x = 15 Min.
2x = 30 Min.
3x = 3 Min.

OPERATION

A simple press of the On button once will run the machine for fifteen minutes. Press twice for thirty minutes, or three times for a quick three minute agitation. The machine will stop once the time has expired. The Stop button will stop the machine mid operation as needed.

PRODUCT WARRANTY POLICY

Dedoes Industries warrants the Dedoes Thrift-O-Matic Machine against defects due to defective material, design or manufacturing to the end user for a period of two years. This warranty covers all manufactured parts on the products that are defective or damaged. All products, goods, services and equipment comply with all applicable environmental, safety, design, and regulatory laws, regulations, customs, and requirements of the region in which they are delivered and put into service. This warranty does not cover any items that have been damaged due to mutilation, alteration, misuse, or abuse. Corrosion due to neglect or chemicals is not covered by this warranty. Dedoes will not be responsible for loss of time, inconvenience, or other consequential damages. Dedoes assumes no liability if proper wiring is not completed by a certified electrician.

The warranty is void:

- If not properly wired to applicable codes by a certified electrician
- If not installed, assembled, or aligned properly
- If Dedoes parts are not used for repairs or installation

This is the only warranty on Dedoes products and no other expressed warranty by anyone other than Dedoes, in writing, will be binding on the manufacturer. This warranty is transferable from the location of the original installation of the equipment to any additional installation locations within the warranty time period. Warranty Return Policy: Under no circumstance should the product or any part there-of be returned to Dedoes for inspection, replacement, and/or repair without the written consent from Dedoes Industries. Returned items must be in original unused condition, unless there is a manufacturer defect. Please contact Dedoes at 1-248-624-7710 to obtain a Returned Goods Authorization Number and to discuss other specifics of the return.



Thrift-O-Matic Machine

Maintenance

Caution: Disconnect the electrical power before performing any service on the machine.

LUBRICATION

Lubricate the machine periodically. The zinc bushing have an Oilite brass bushing. These may require lubrication more often. In either case, use a lubricant recommended by your paint manufacturer.

NOTE: When lubricating bushings, remove the paint from under the driver hinges and run the machine for a short period of time.

SHELF BELT ADJUSTMENT

Attention must be paid to the tension of the belt. Normal use will cause the belt to stretch. Adjustment slots for the power head belt are located at each idler. To adjust the belt, loosen the idler, and slide the idler closer to the center of the power head until the tension is correct. Then re tighten the idler.

MOTOR BELT ADJUSTMENT


The Motor Belt is properly tensioned at factory standards. Optimal tension is achieved when the motor mount plate is parallel to the left side panel.

NOTE: Over tensioning the motor belt will cause damage to the belt if the motor mount is not parallel to the left side panel.

IMPORTANT: NEW BELTS SHOULD BE CHECKED AND ADJUSTED AFTER THE FIRST DAY OF OPERATION AS NECESSARY.


SHELF BELT REPLACEMENT

1. Disconnect the electrical power to the machine.
2. Wear safety gloves. The machine edges may be sharp.
3. Swing the motor guard upward.
4. Remove the top shelf cover.
5. Remove the motor belt.
6. Loosen the idler assemblies.
7. Remove the old power head belt.
8. Starting with the drive pulleys on the left side, position the new belt around each of the pulleys and idler assemblies. The idlers must be on the outside of the belt.
9. Set the idlers in the slots to the correct belt tension. Tighten the idlers evenly to assure even back bend on each idler.
10. Re-install the motor belt.
11. Re-install the top shelf cover and lower the motor guard.
12. Reconnect power and run the machine under observation for several minutes.

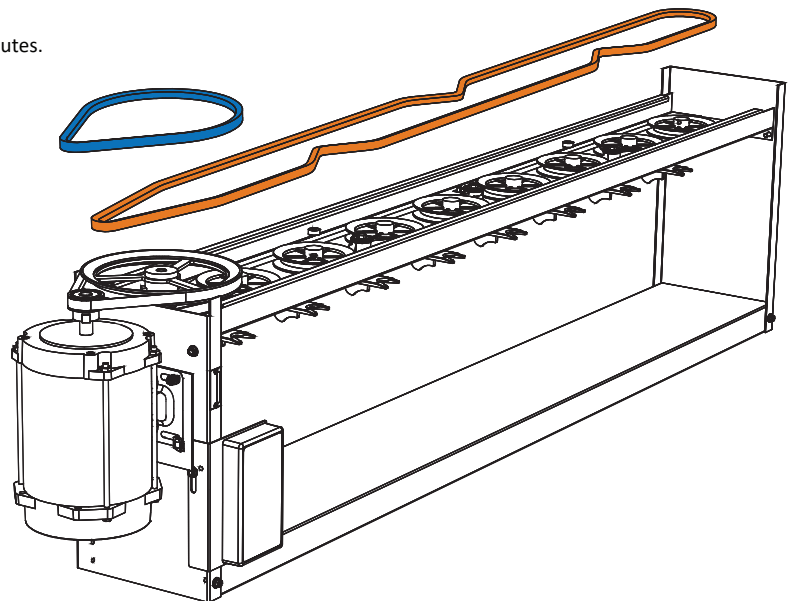

P# P2765 (4L285)
Motor Belt Path


P# 5529 (AX120)
Shelf Belt Path

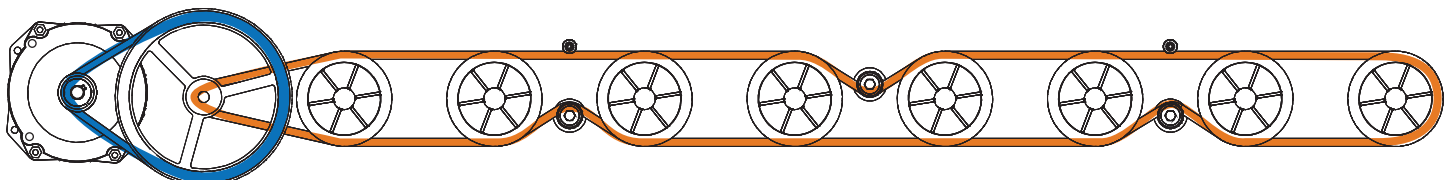

Thrift-O-Matic 8 Place Machine

Parts list & Breakdown


Part #: 008040-T

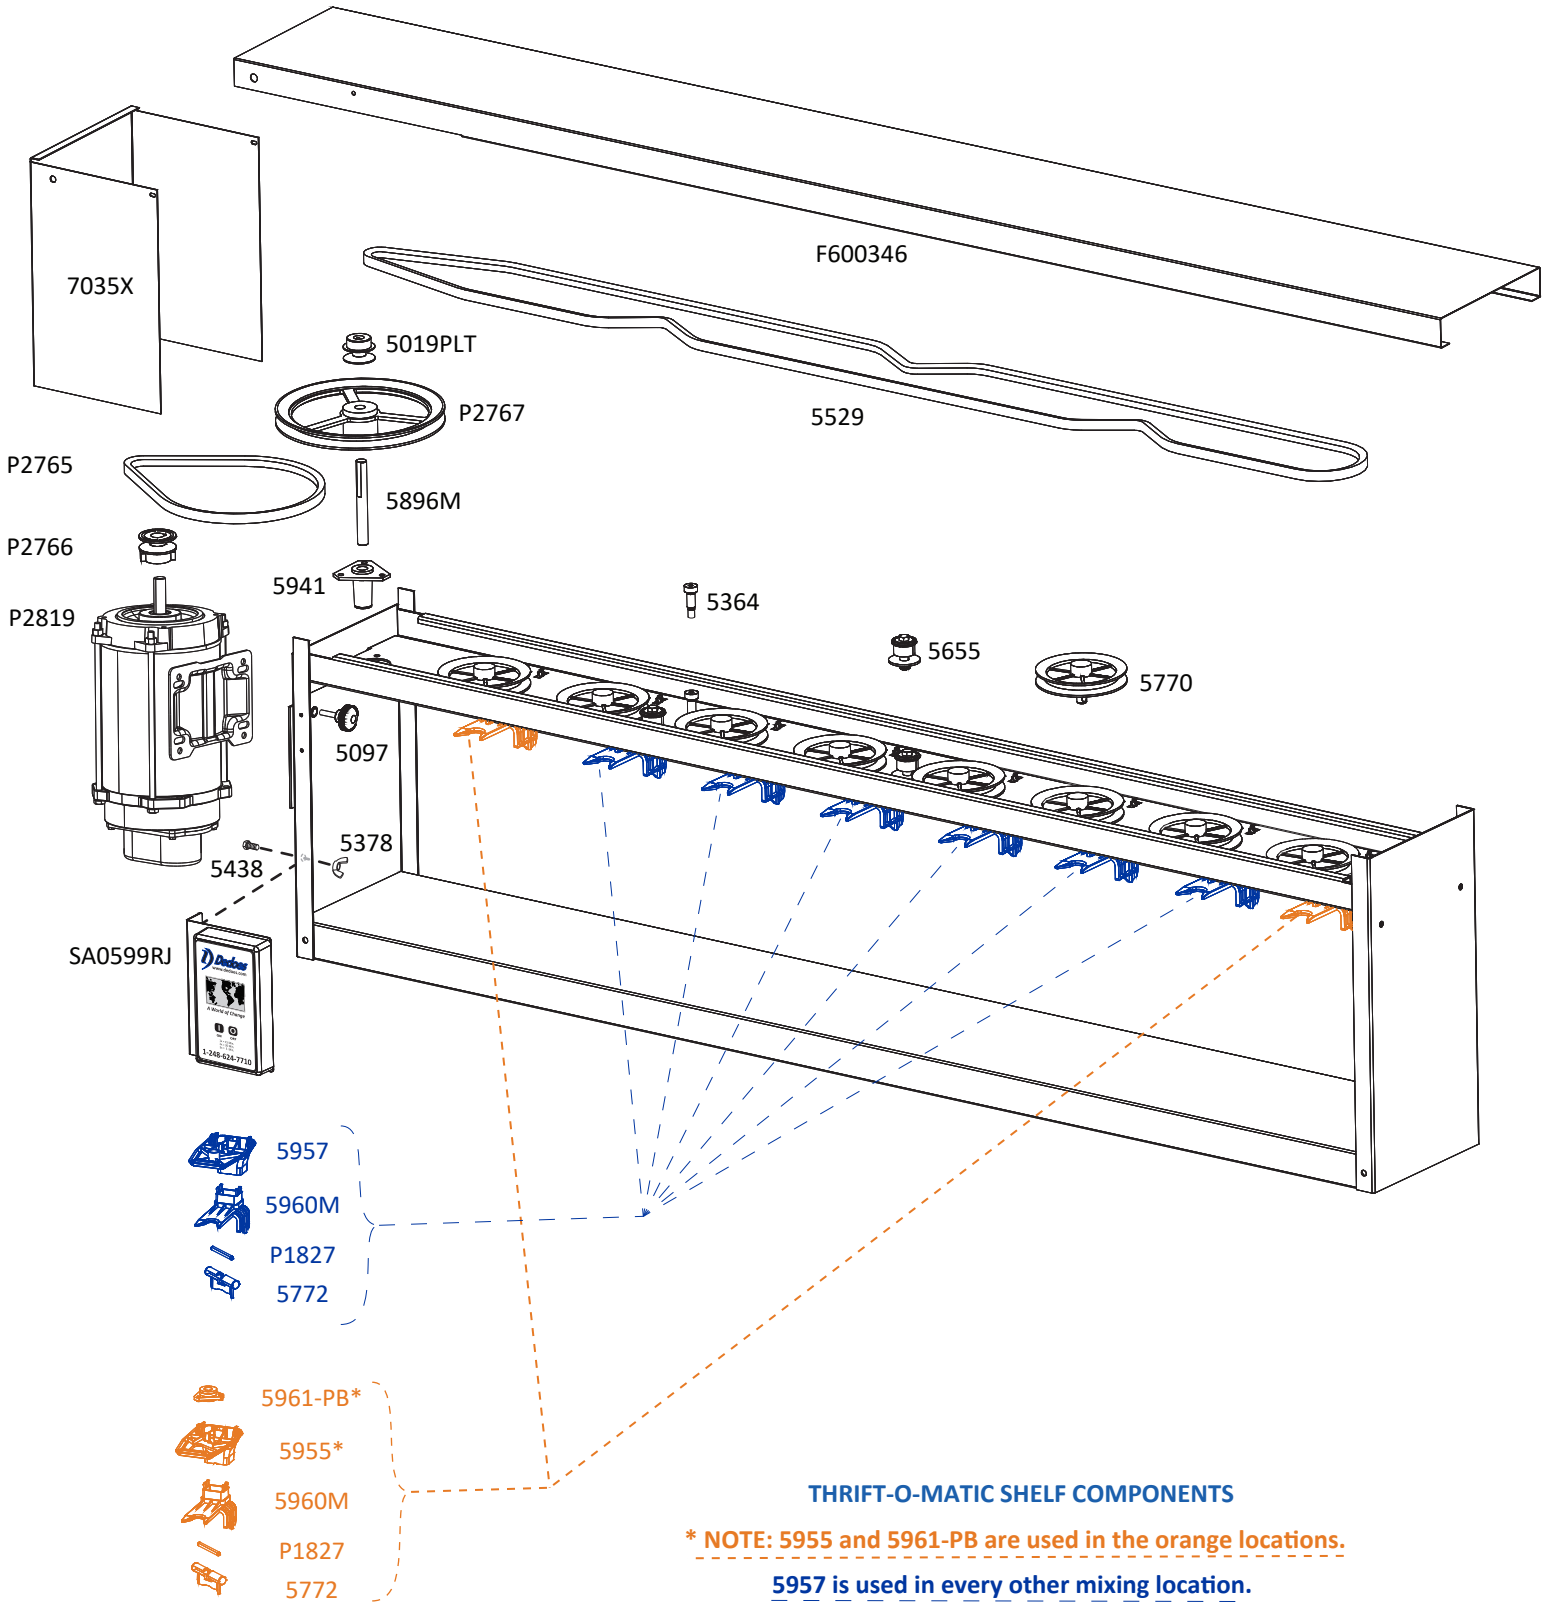

Thrift-O-Matic 16 Place Machine

Parts list & Breakdown

Part #: 016040-T

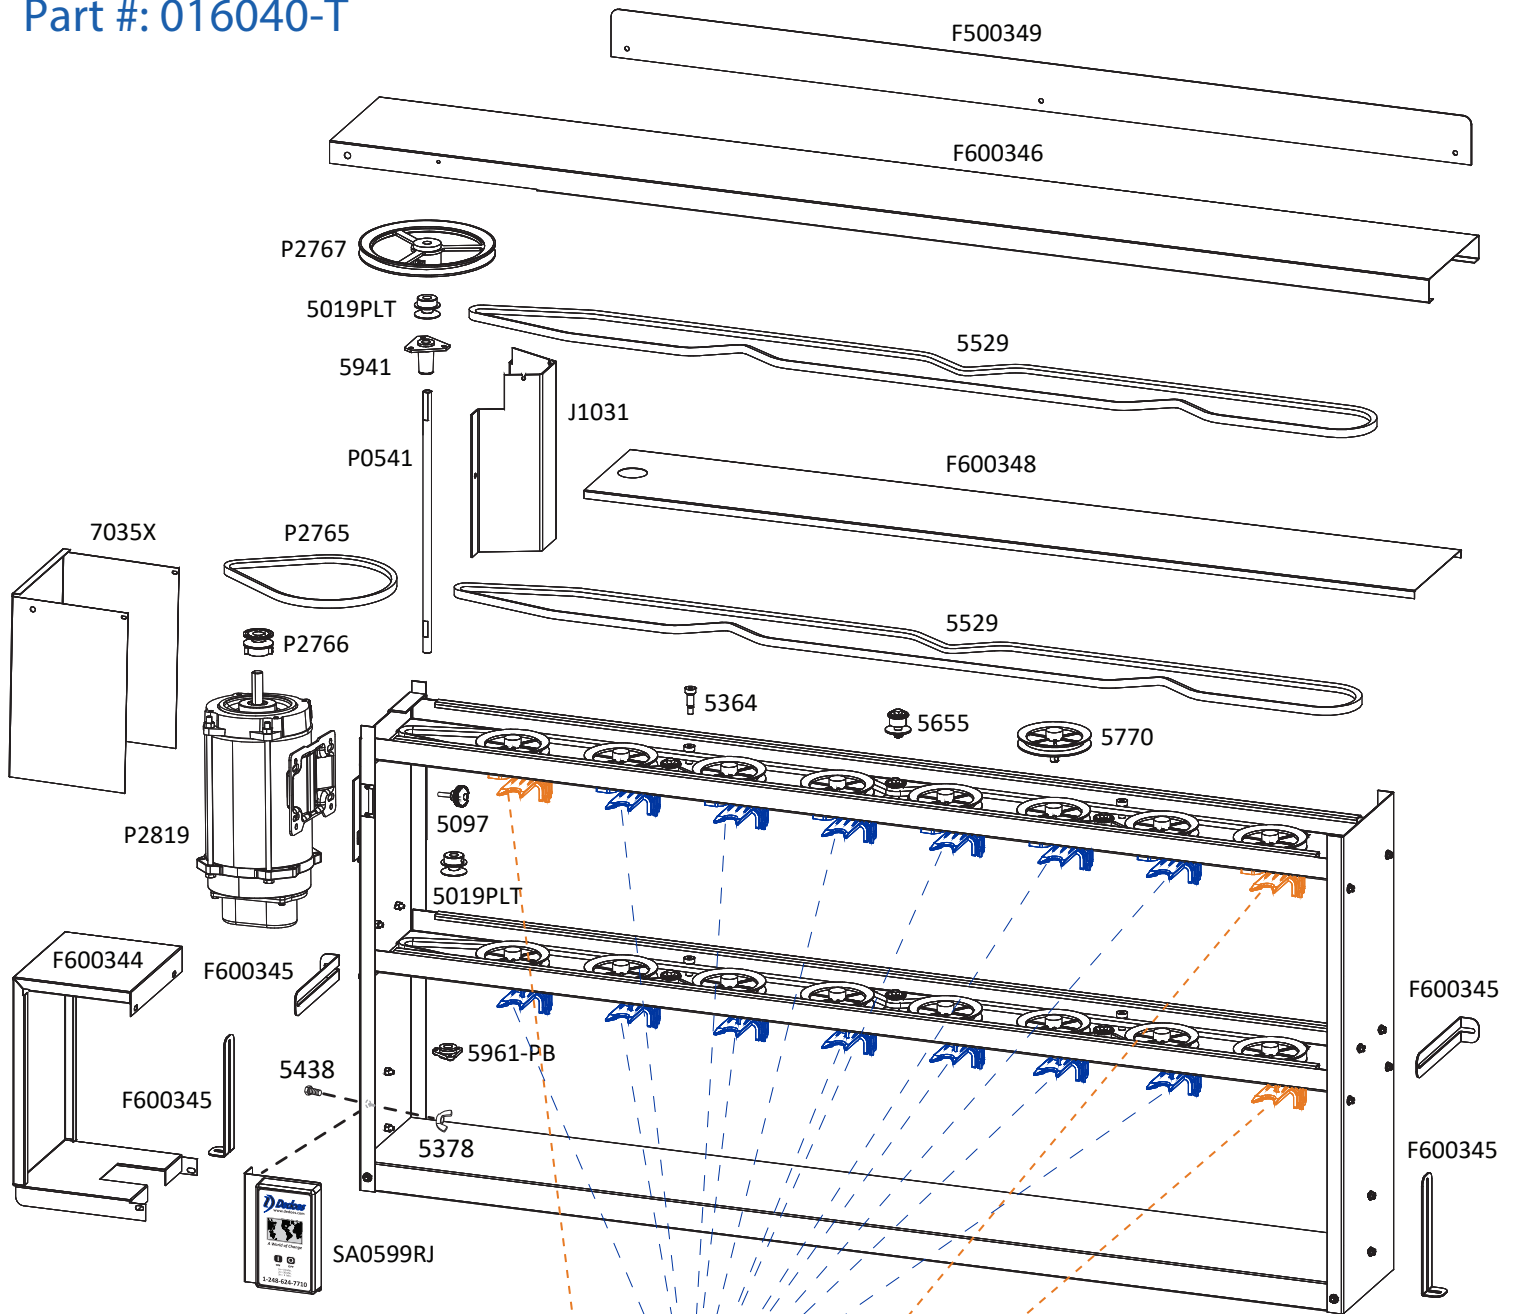

-  5957
-  5960M
-  P1827
-  5772

-  5961-PB*
-  5955*
-  5960M
-  P1827
-  5772

THRIFT-O-MATIC SHELF COMPONENTS

* NOTE: 5955 and 5961-PB are used in the orange locations.

5957 is used in every other mixing location.