
72” Flat Pack Storage Cabinet Assembly Instructions

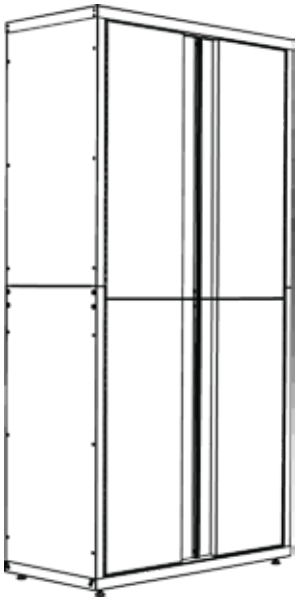

Dedoes P# 800712



Tools Required
- 1/8” Allen Wrench
- 5/16” Socket or Wrench
- 10mm Socket or Wrench


It is best practice to open each of the three boxes and confirm that all components are included.

A parts list can be found on page 11.


The parts list will help identify the proper components and orientation required for each step of the assembly.

1

Install the four adjustable feet into the bottom assembly.

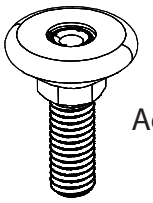

P# P2933
Adjustable Foot
4 pieces

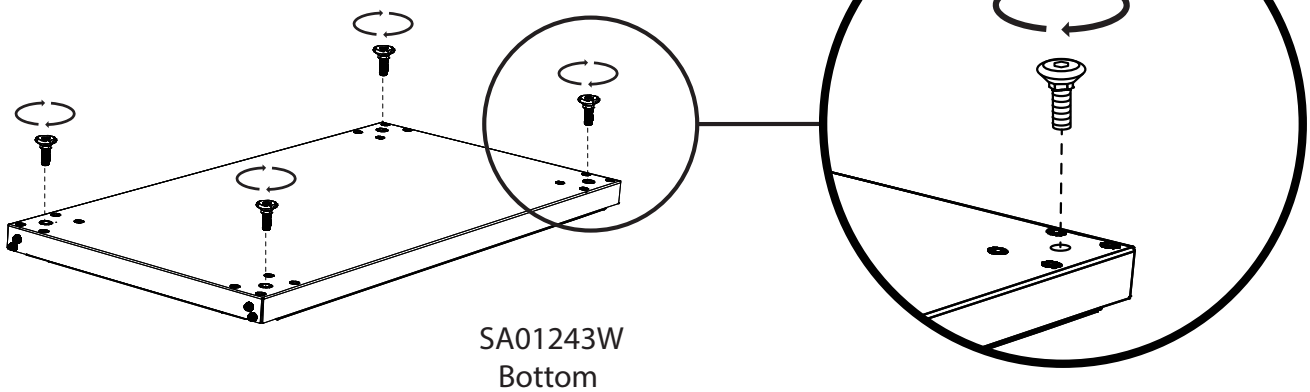


SA01243W
Bottom
Assembly

248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22


2

Flip the Base over and place it on a clean level surface.
Insert the lower right side panel **into** the right side slot of the bottom assembly.
Add six Hex Bolts to each side and rear. Do not tighten the bolts completely.

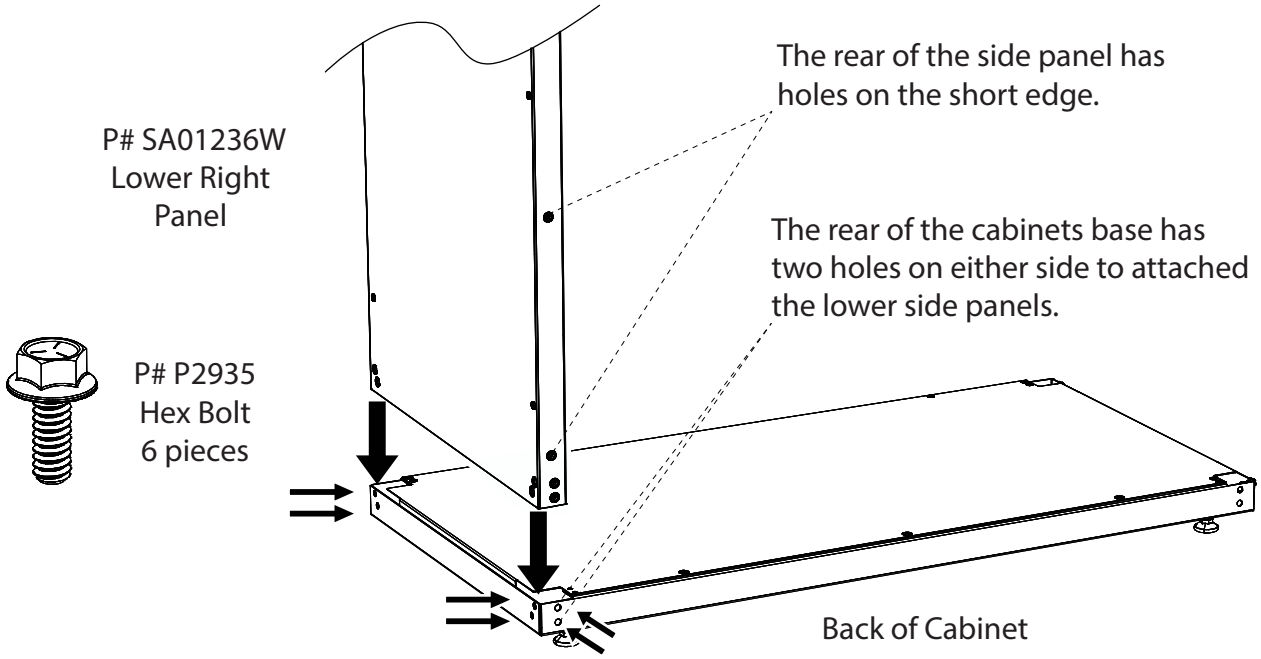

3

Insert the lower left side panel **into** the left side slot of the bottom assembly.
Add six Hex Bolts to each side and rear . Then tighten them slightly.

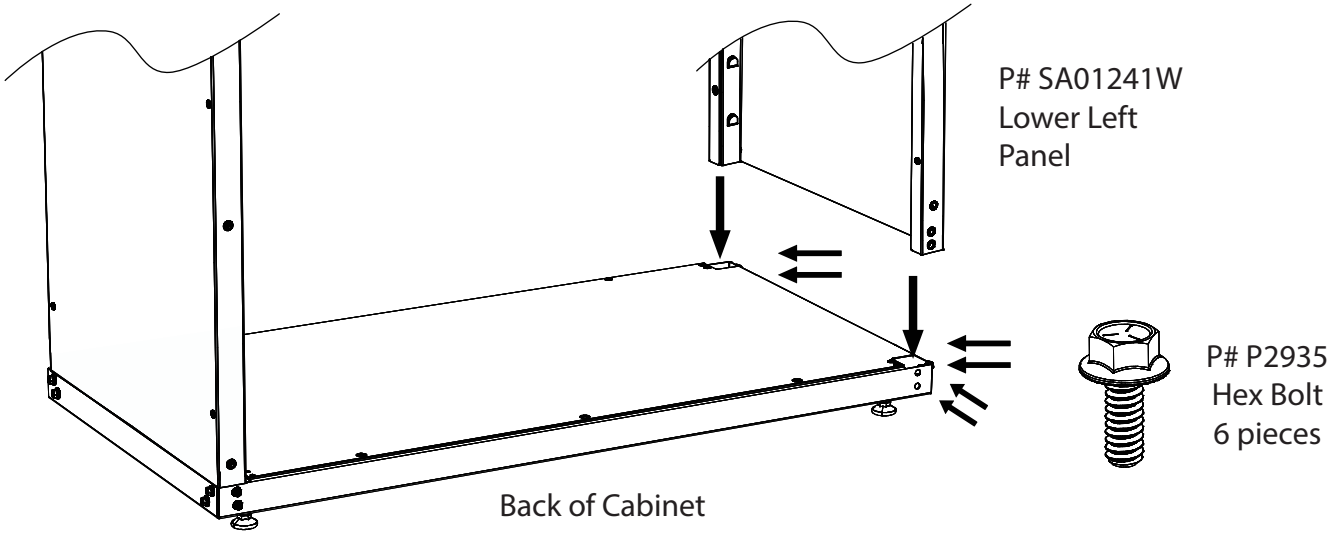


248-624-7710 / dedoes.com


PART # P2946 KD RV.0 - 2026-09-22

4

Attach one of the two Top/Bottom Back panels to back of the cabinet.
Add three Hex Bolts to each side. Do not tighten the bolts completely.




P# P2935
Hex Bolt
6 pieces

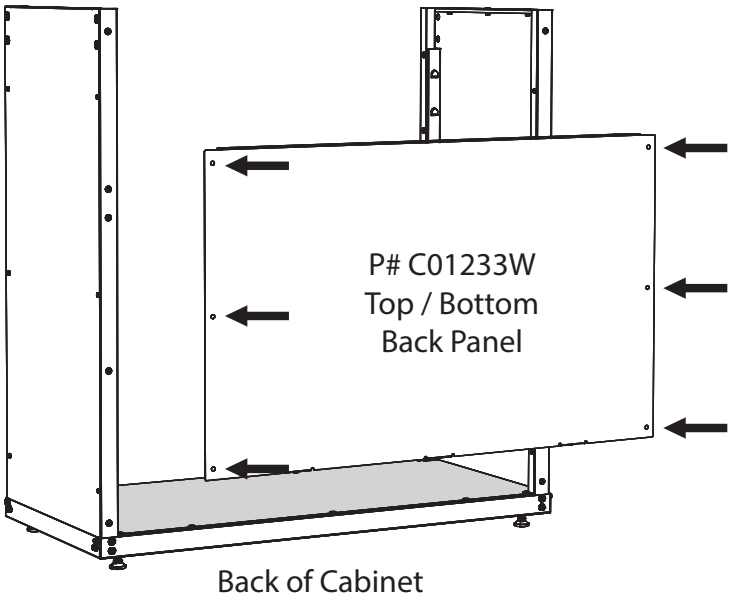


Back of Cabinet


The three tabs on the back panel should be installed on the bottom and toward the interior of the cabinet.

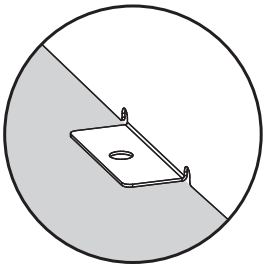


5

Add three Hex Bolts on the interior of the cabinet into each tab to attach the bottom of the back panel to the base assembly.

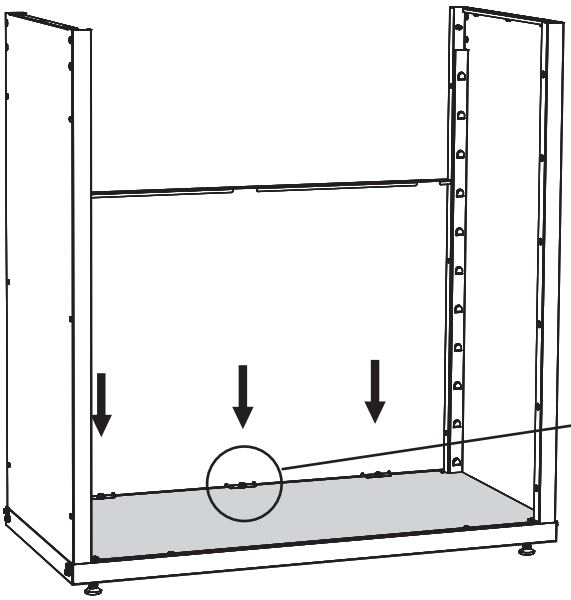



P# P2935
Hex Bolt
3 pieces

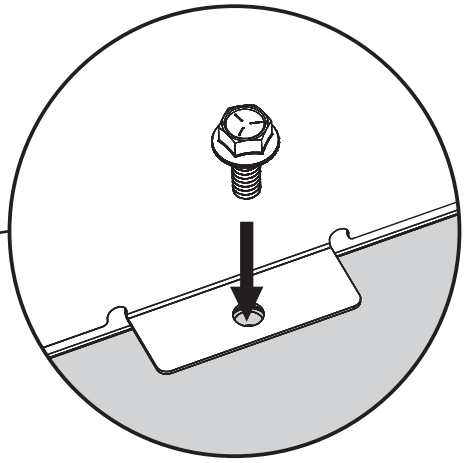


Front of Cabinet

248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22


6

Install one adjustable shelf onto the cabinet assembly near the middle.
Slot each shelf corner into the tab on each corner post.

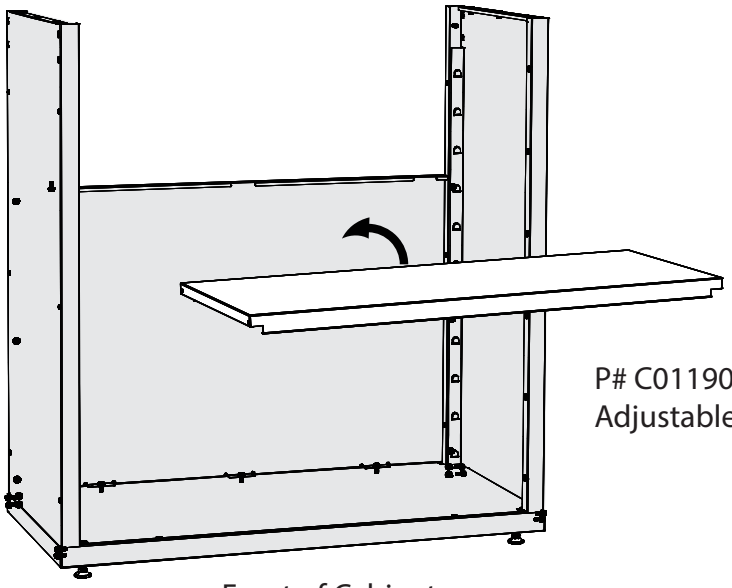


Front of Cabinet


P# C01190W
Adjustable Shelf

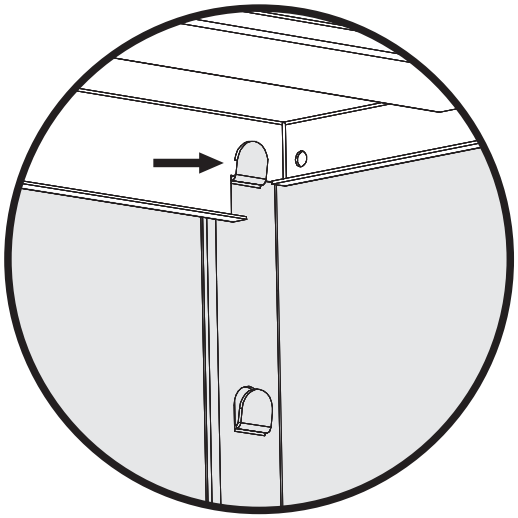

7

Tighten all hex bolts installed to this point.
The lower cabinet assembly should now be rigid.

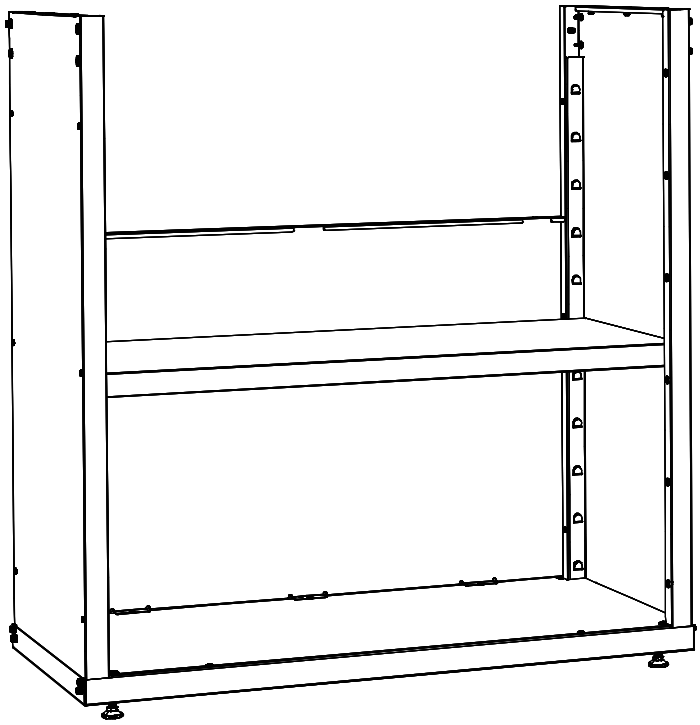




P# P2935
Bolt
21 pieces

248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22


8


Locate the upper left and right side panels. (P# SA01237W & P# SA01235W)
The front edge of these panels will not have holes. The rear edges have six holes.
Install upper side panels into the lower side panels.
The upper panel’s extensions will slide **INTO** the lower panel.
Insert seven Hex Bolts, four on the exterior of the cabinet and three on the interior.

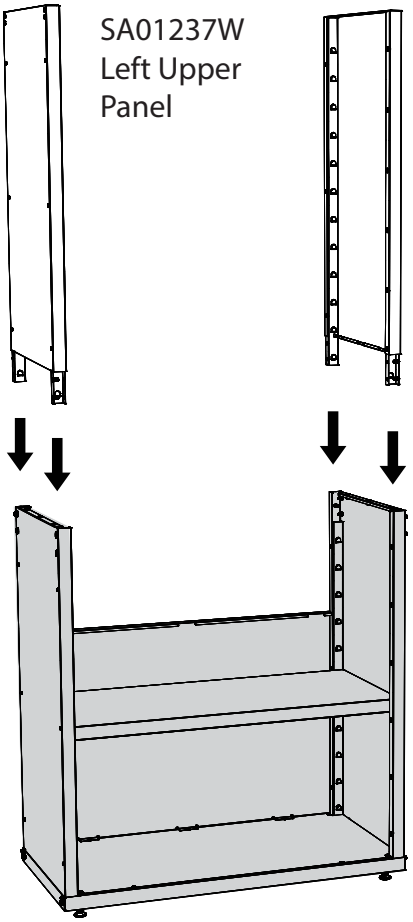


SA01237W
Left Upper
Panel


SA01235W
Right Upper
Panel

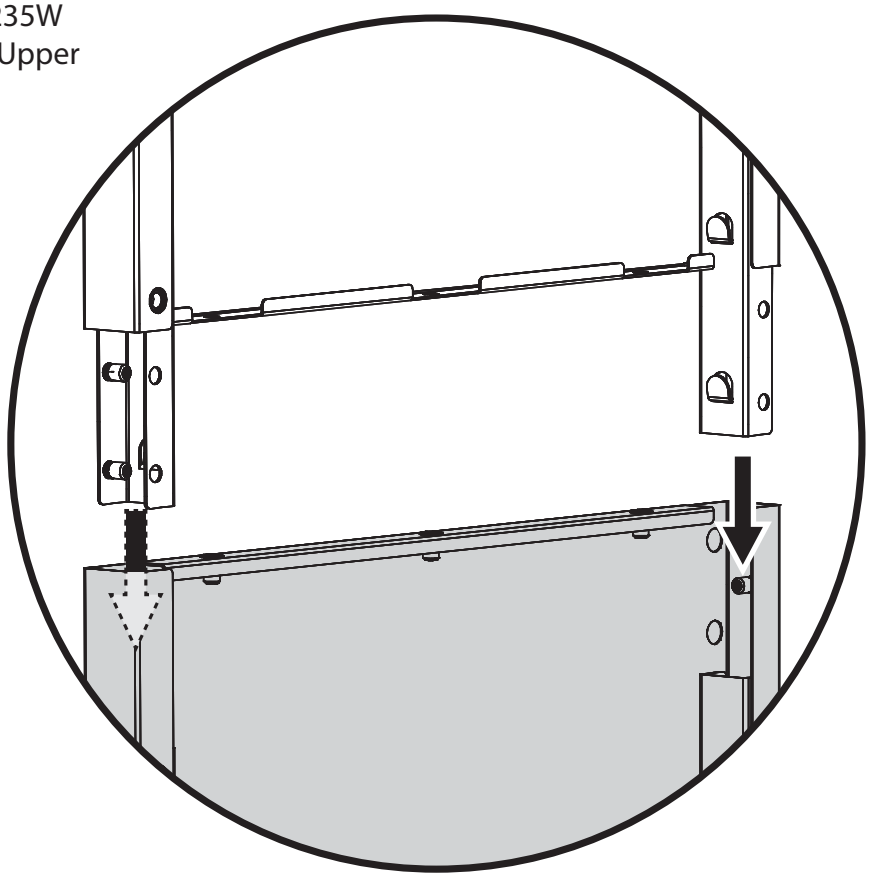




P# P2935
Hex Bolt
7 pieces

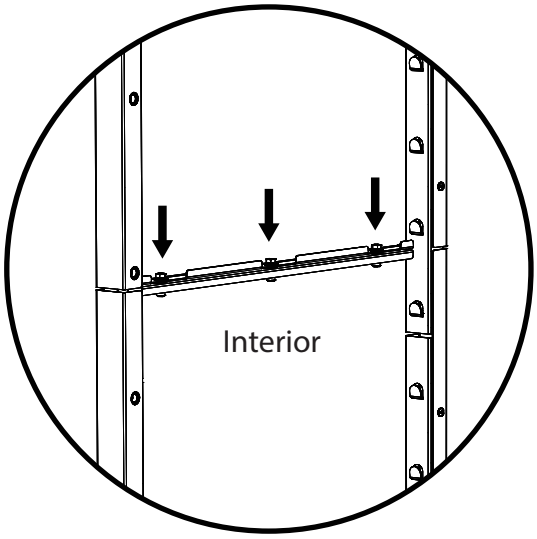

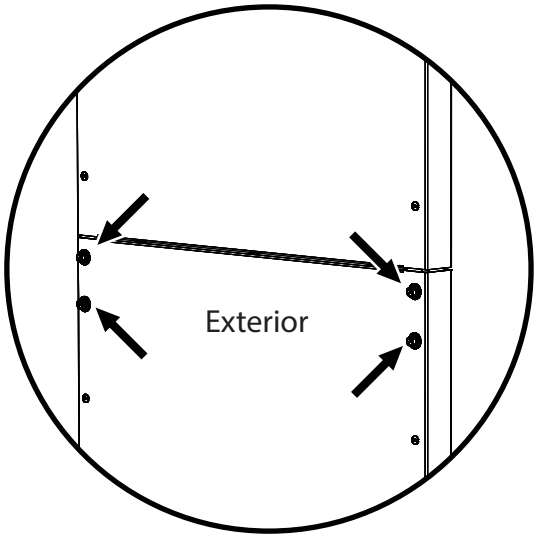


248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22

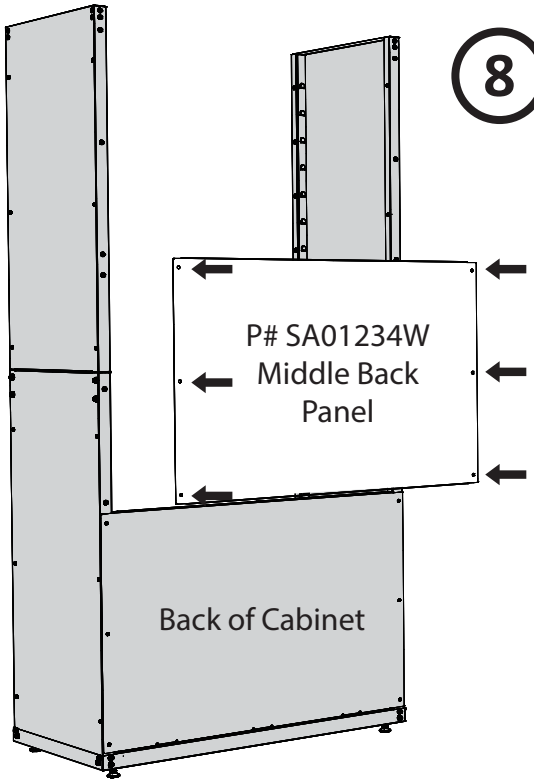


8

Install the middle back panel with six hex bolts onto the back of the cabinet.
Either long edge of the panel can be facing up or down.
Ensure the bent edges of the panel are facing the interior of the cabinet.




P# P2935
Hex Bolt
6 pieces

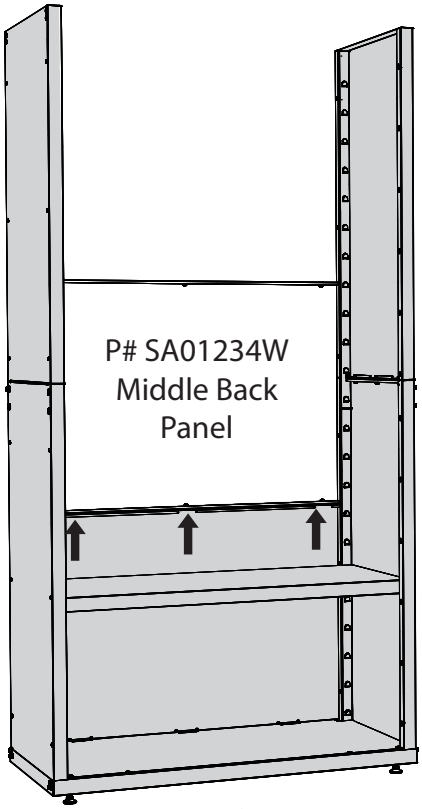

9


On the interior of the cabinet, secure the middle back panel to the lower back panel using three hex bolts.
These bolts install from the top of the bottom panel into the bottom of the middle panel.



P# P2935
Hex Bolt
3 pieces

248-624-7710 / dedoes.com


PART # P2946 KD RV.0 - 2026-09-22

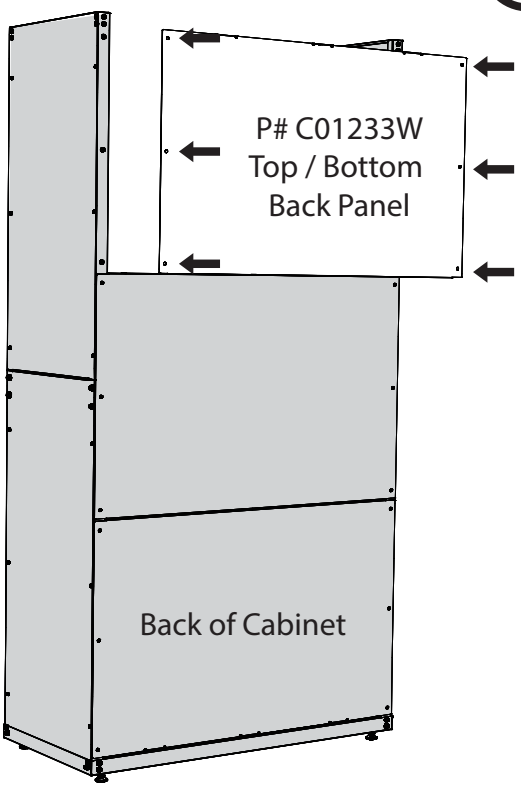


10


Attach the last one of the Top/Bottom Back panels to upper back of the cabinet.
Add three Hex Bolts to each side and tighten them slightly.

The three tabs on the back panel should be installed on the top and toward the interior of the cabinet.




P# P2935
Hex Bolt
6 pieces

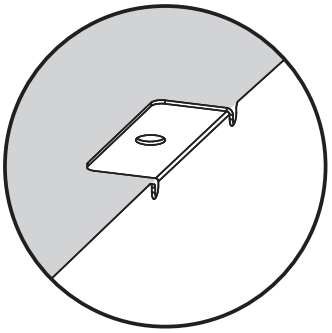

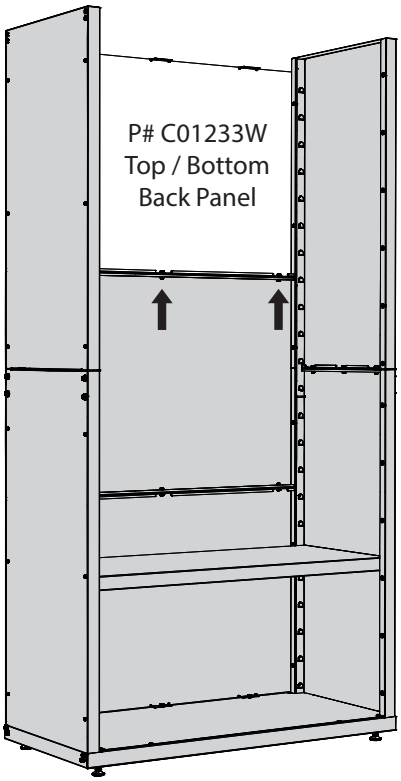

11


Add three Hex Bolts on the interior of the cabinet.



P# P2935
Hex Bolt
3 pieces

248-624-7710 / dedoes.com


PART # P2946 KD RV.0 - 2026-09-22

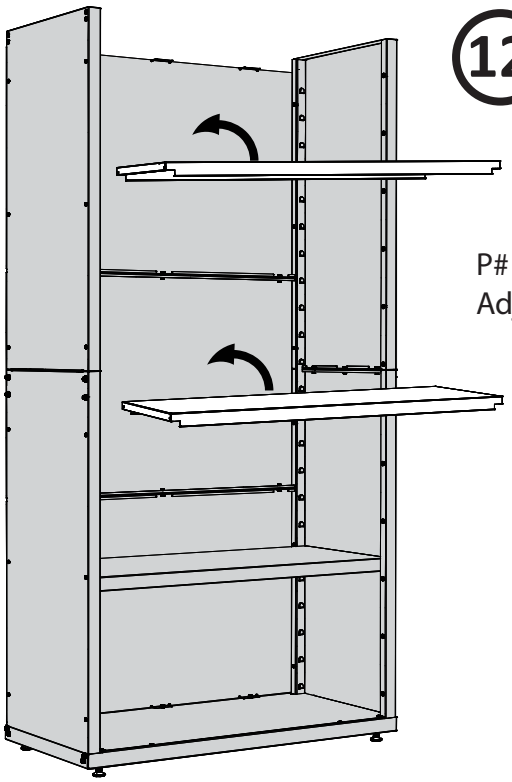


Front of Cabinet

12 Install the last two adjustable shelves into the cabinet.
Slot each shelf corner into the tab on each corner post.


P# C01190W
Adjustable Shelves

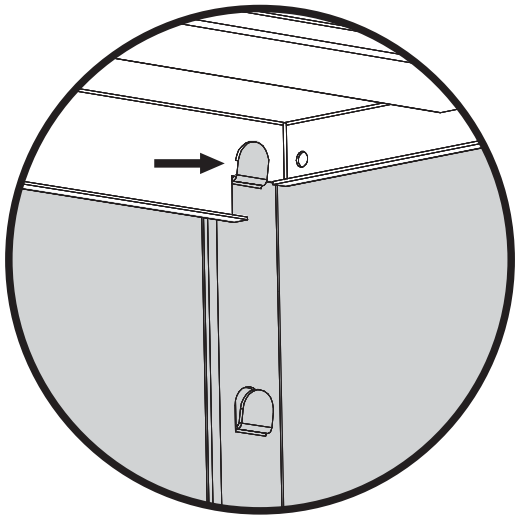


13 Install the Top Assembly onto the cabinet.
The Upper Side Panels should slot **INTO** the Top Assembly.
Insert twelve Hex Bolts into the exterior and
three into the interior of the Top Back Panel to connect
the top to the back.

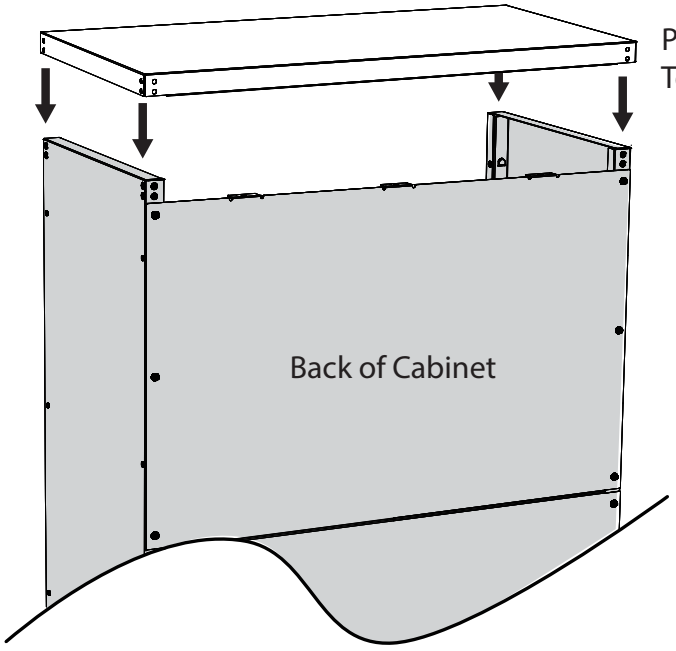

P# SA01232W
Top Assembly

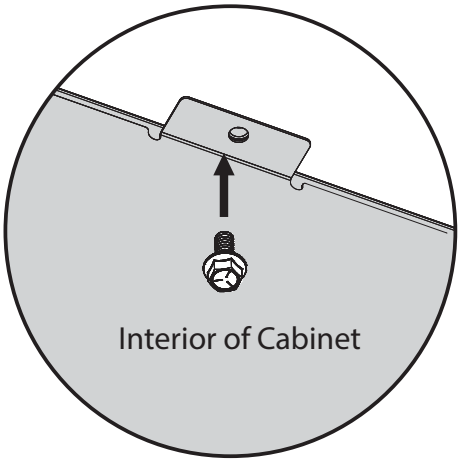




P# P2935
Hex Bolt
15 pieces

248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22


14 Tighten all hex bolts installed to this point.
The cabinet assembly should now be rigid.



P# P2935
Hex Bolt
62 pieces

15 Place two doors face down on a clean level surface.
Bolt the pair together using three 5305 Bolt and P2937 Nuts.
Repeat for a second door.

All four doors are identical.

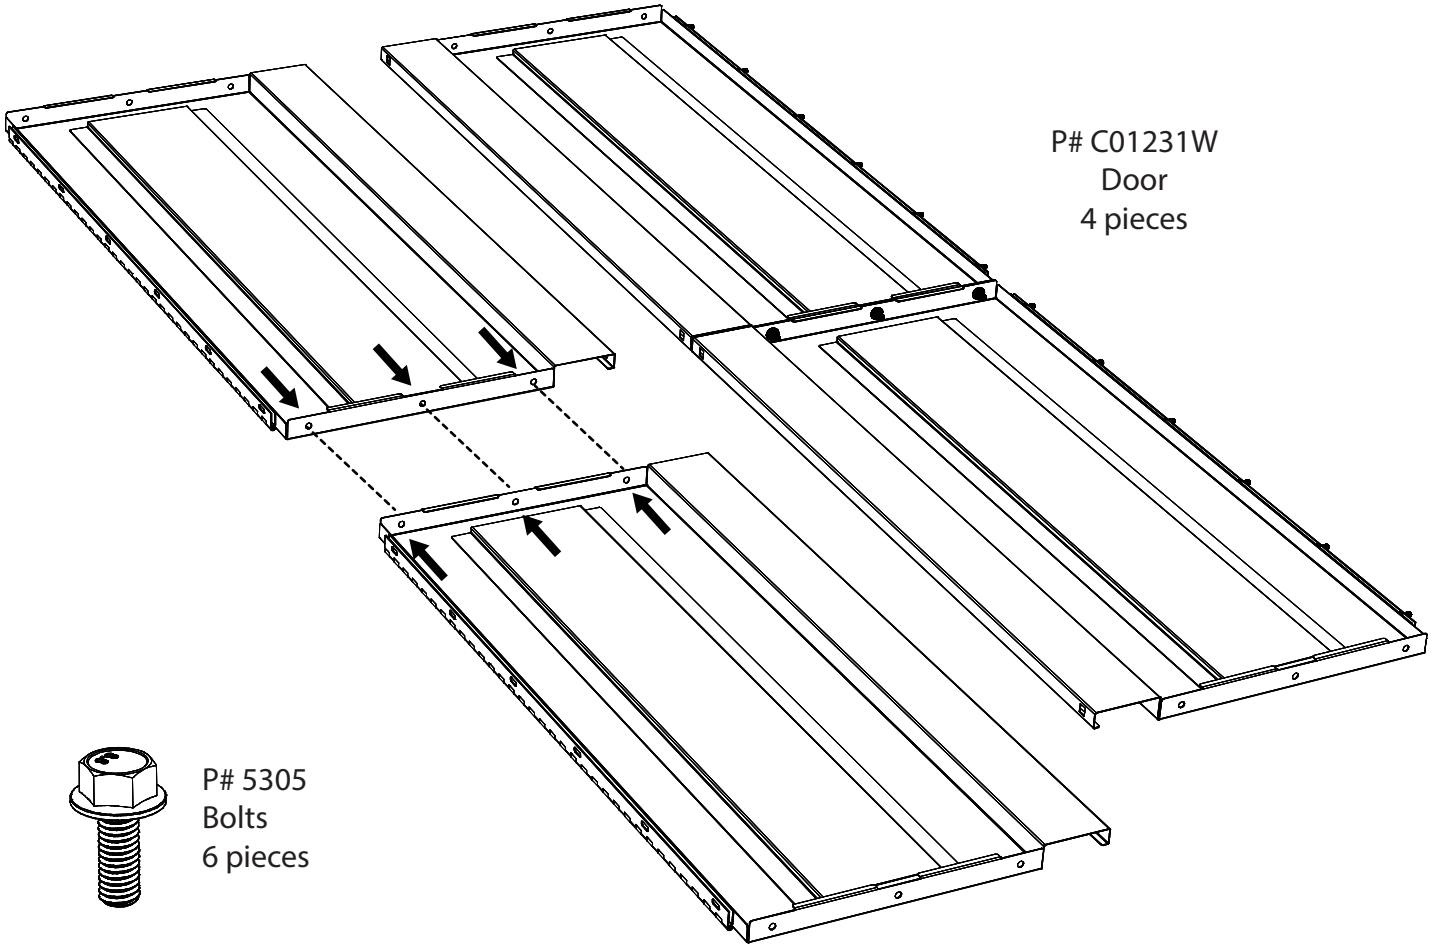

P# C01231W
Door
4 pieces

P# 5305
Bolts
6 pieces



P# P2937
Nuts
6 pieces


248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22


16

Install the doors onto the cabinet with ten Hinge Bolts per door.
Take care to center each door top to bottom in the opening.
Aligned each door to the other to ensure the doors close properly.
Then tighten all bolts/nuts on the doors and hinges.

Tools Required
- 1/8” Allen Wrench



P# P2936
Hinge Bolts

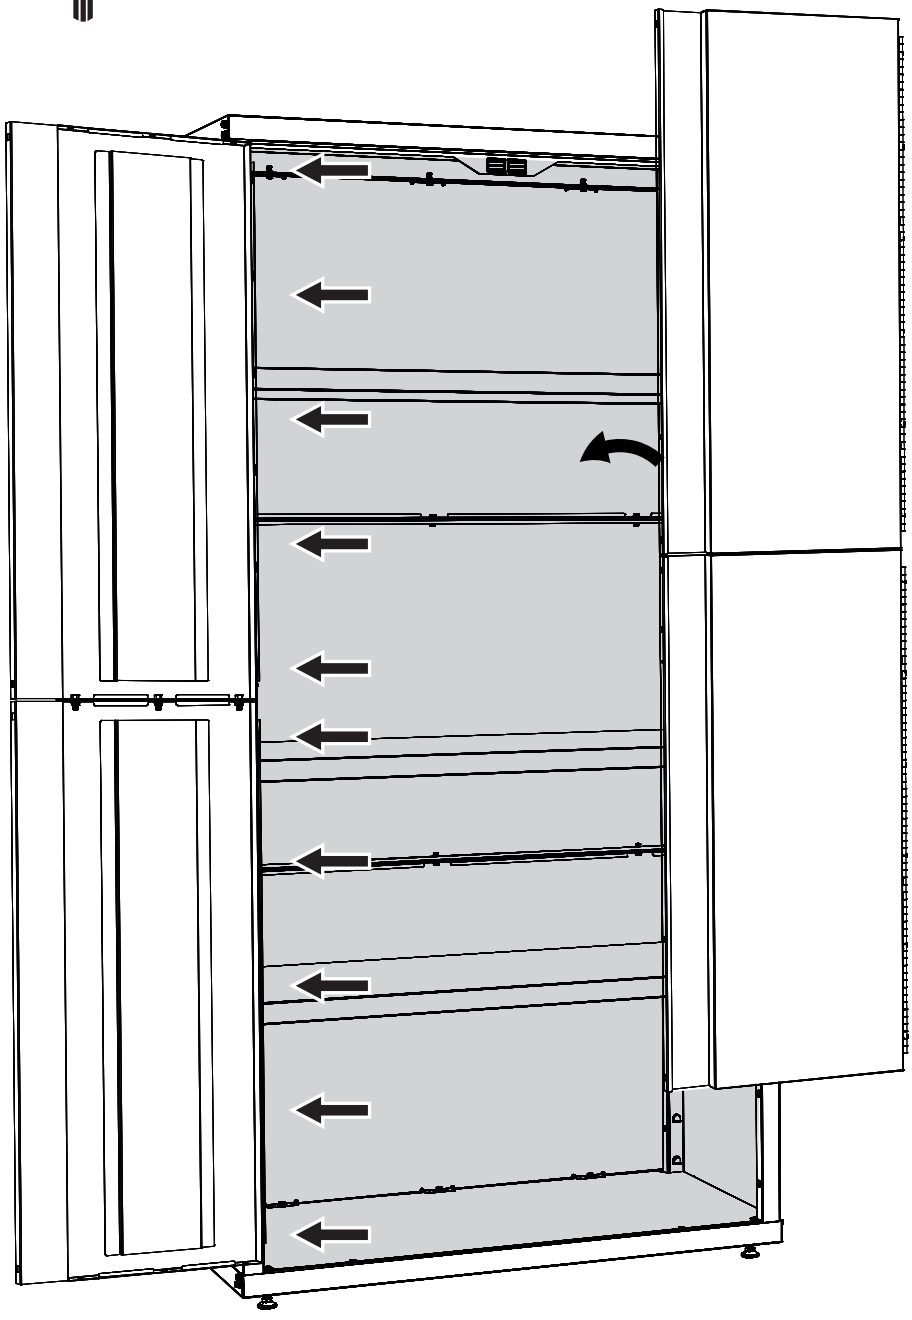


248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22


72” Flat Pack Storage Cabinet Parts List

P# C01232W
Top Assembly - 1 piece

The Top Panel has the door magnets on the front,
and two holes on each side of the back.

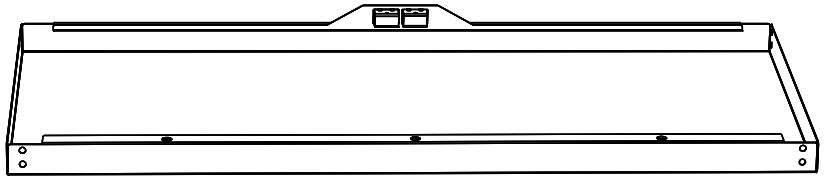


The rear of the top and bottom panel
is identified by the two holes at either end.
(Both the top and bottom assembly are pictured upside down)

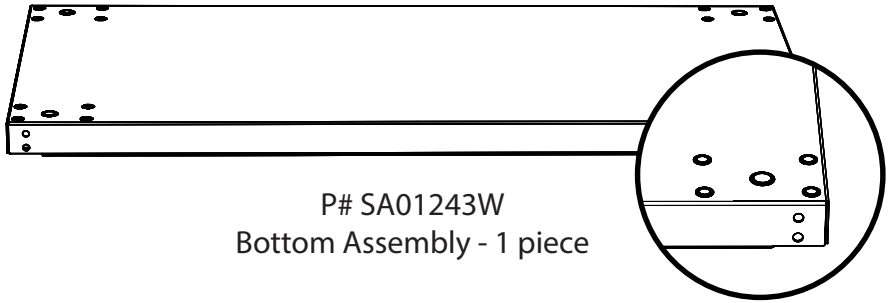


P# SA01243W
Bottom Assembly - 1 piece


The Bottom Panel has five holes at each corner.
The side with the holes is the bottom where
the adjustable feet or casters* will attach.

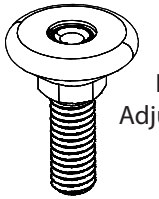


P# P2933
Adjustable Foot
4 pieces




P# P2935
Bolt
68 pieces



P# 5305
Bolt
6 pieces




P# P2936
Hinge Bolt
24 pieces



P# P2937
Nut
24 pieces

P# C01190W
Adjustable Shelf
3 pieces

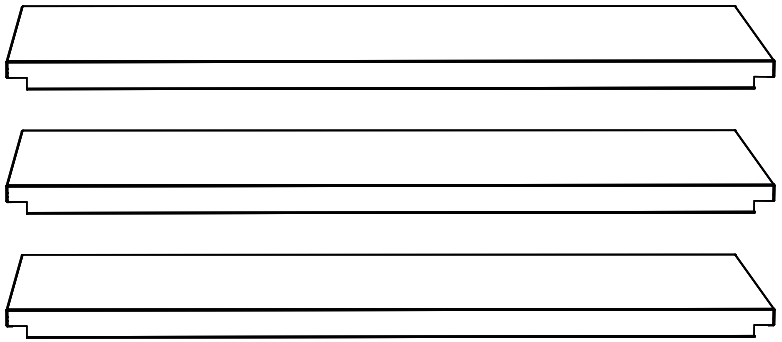


*Heavy Duty Locking Swivel Casters available
Contact Dedoes for more information

248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22

SIDE PANELS

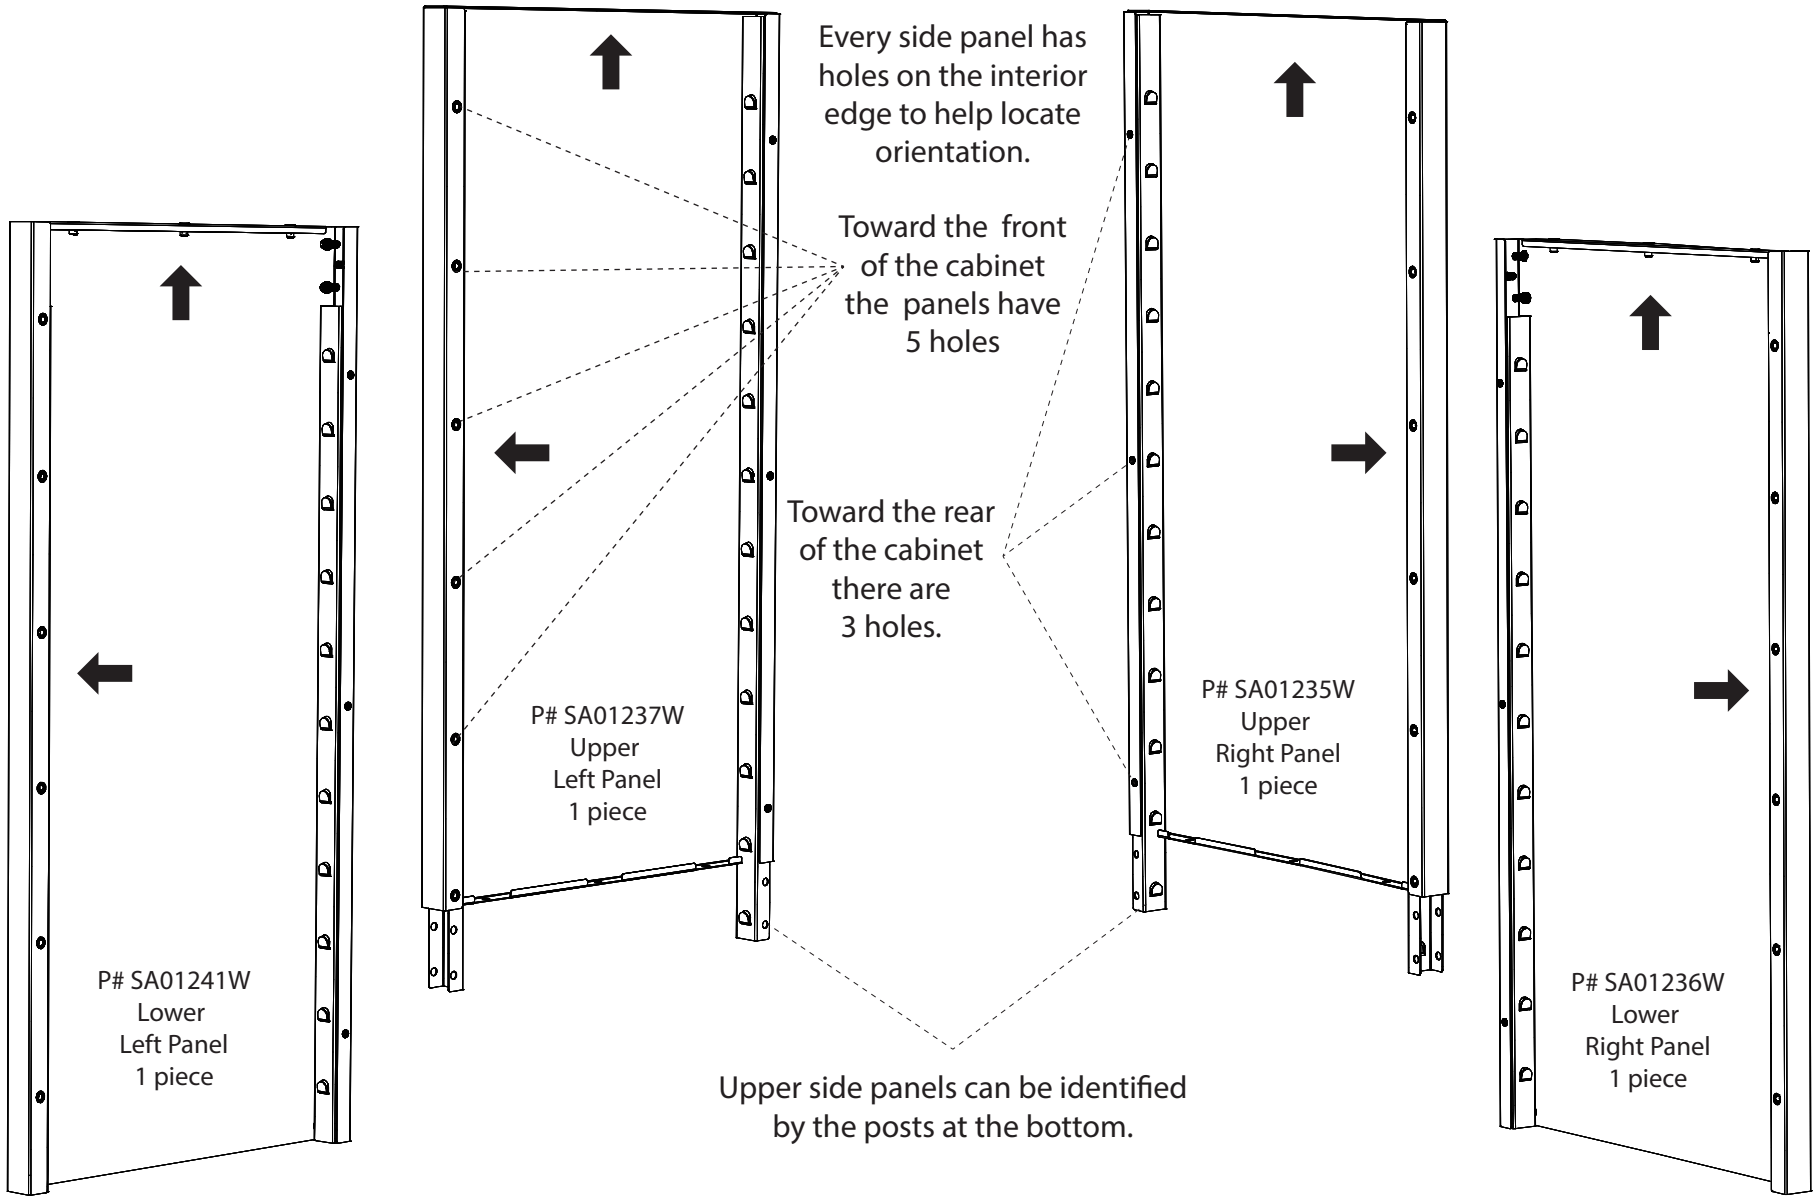


248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22

BACK PANELS

The top and bottom back panels are identical. These can be identified by the three tabs on one side. orientate the tabs upward for the top installation, and downward for the bottom installation.


The tabs will be on the interior of the cabinet when assembled correctly.

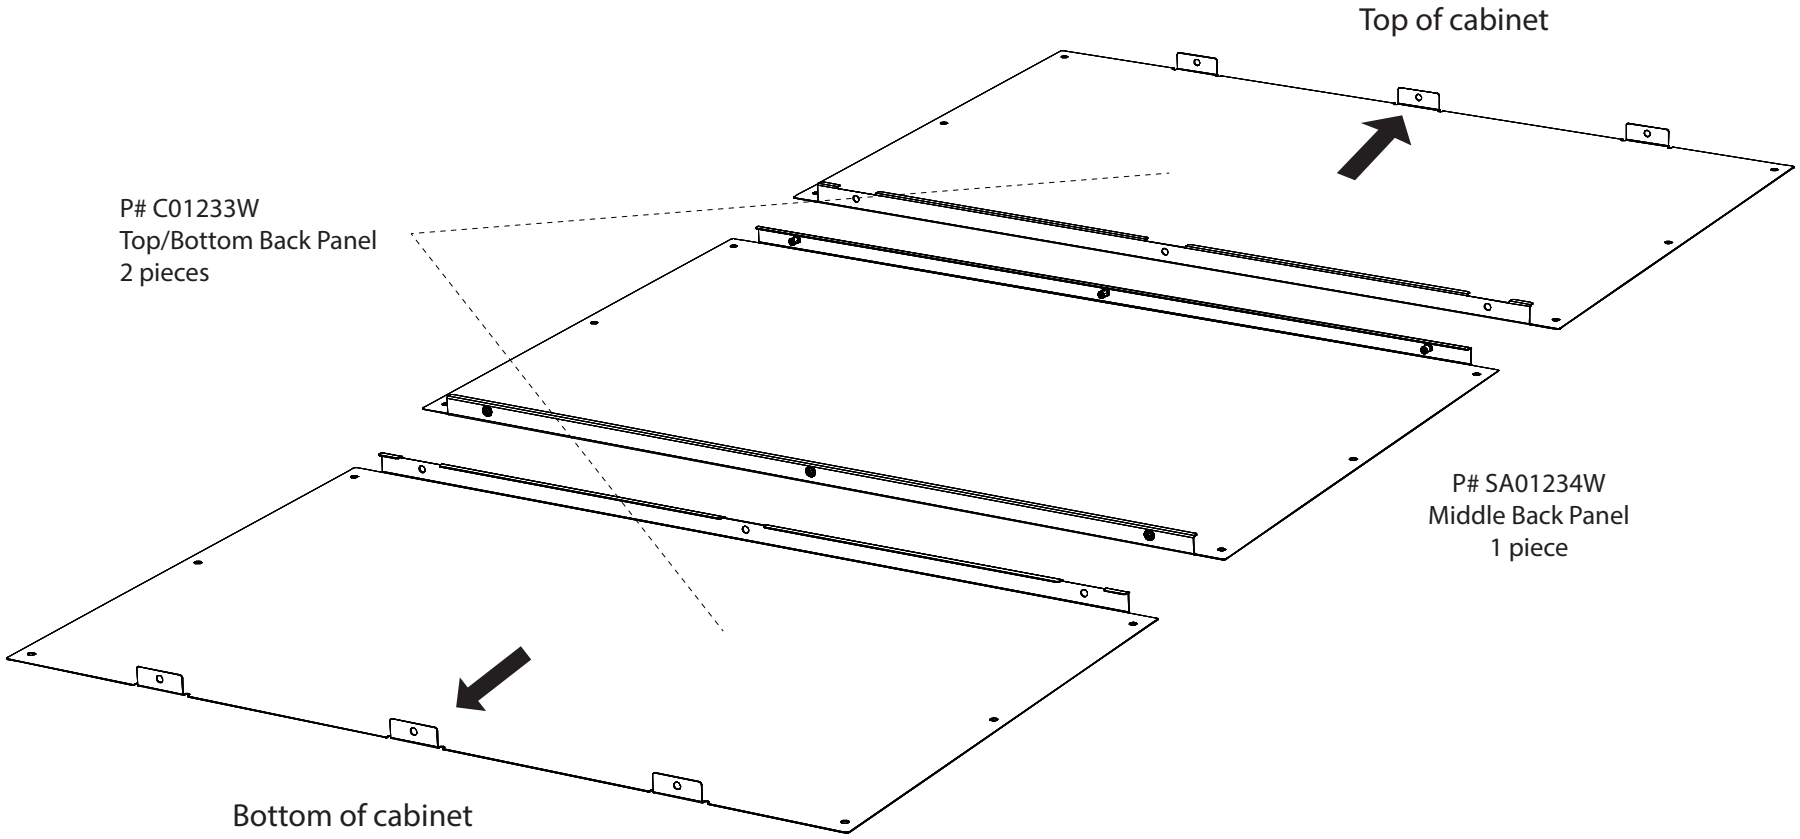

248-624-7710 / dedoes.com


PART # P2946 KD RV.0 - 2026-09-22

DOORS

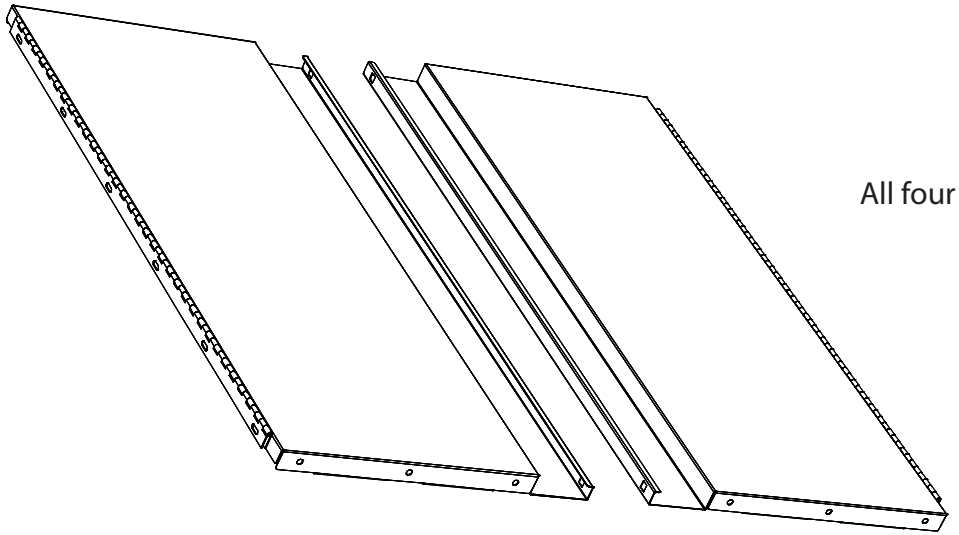

All four doors are identical.


P# C01231W
Door
4 pieces




The top doors are attached to the bottom doors using


P# 5305 Bolts

and



P# P2937 Nuts

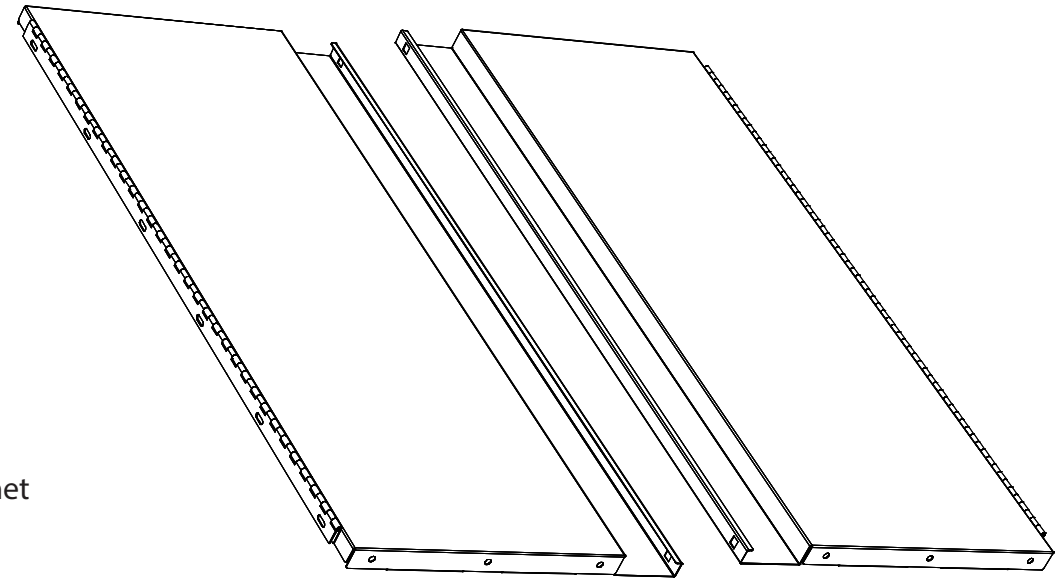



The doors are attached to the cabinet using the P# P2936 Hinge Bolts

248-624-7710 / dedoes.com

PART # P2946 KD RV.0 - 2026-09-22