



Variable Flow Spout (VFS) Pour Lid Product Reference

Dedoes P#	Description
VL01	Variable Flow Spout Main 57mm Lid
VA001	Variable Flow Spout 32mm Rieke Adapter
VA002	Variable Flow Spout 32mm Bericap Adapter
VA003	Variable Flow Spout 1.125 Beta Swivel Adapter
VA004	Variable Flow Spout 42mm Rieke Pull Out Adapter
VL01-A02	Variable Flow Spout VL01 Main 57mm Lid with VA002 Adapter Assembly
VL01-SAM	Variable Flow Spout Sample Pack Includes one each VL01 / VA001 / VA002 / VA003 / VA004

When using an adapter with the VFS Main Lid, be sure to securely tighten the adapter and Main lid together before attaching to the container.




Variable Flow Spout (VFS) Pour Lid Product Reference


*****IMPORTANT!*****

To prevent spills you must press the thumb lever and open the spout **BEFORE** you tip and begin to pour the contents of the container. Failure to do so may result in the contents splashing out of the container if opened after the container has been tipped.

① OPEN BEFORE DISPENSING

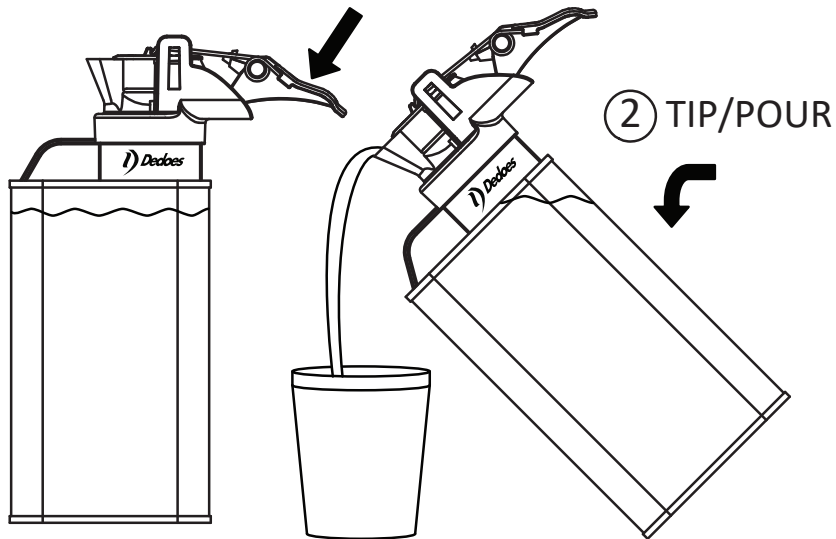

TO REMOVE LID, PUSH DOWN AND TURN


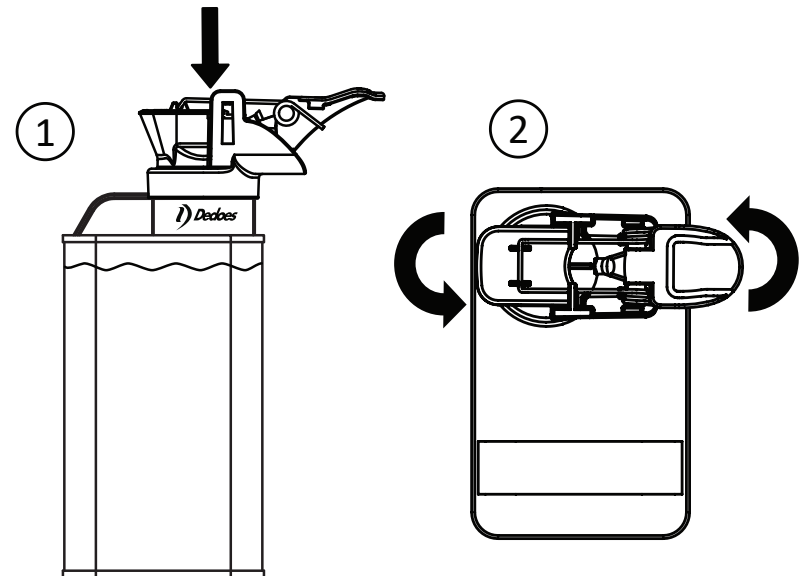




P# VL01 Variable Flow Spout 57mm Main Lid

To assemble onto a container:

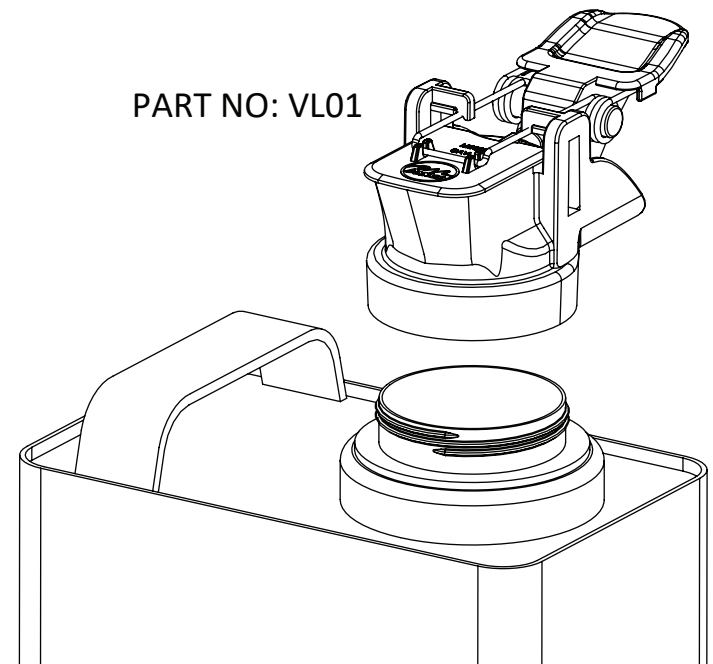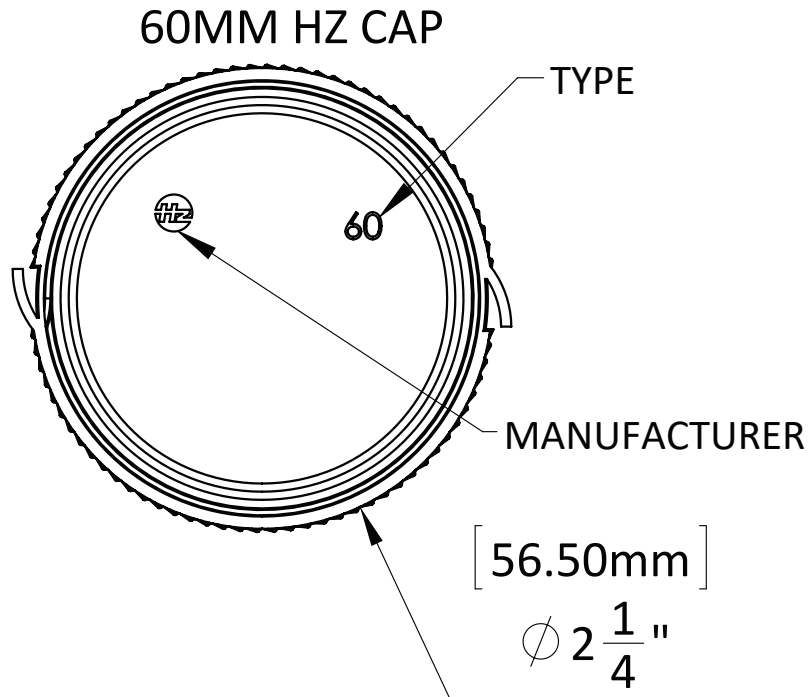

- Remove the cap of the container and identify the type, size, and manufacturer on the bottom of the cap.
- The VL01 is designed to fit some containers alone or to assemble with one of the four adapters to fit many other containers.
- Using the information below, find the lid and adapter combination that will fit your containers.






P# VA001 Variable Flow Spout 32mm Rieke Adapter



To determine which 32mm adapters you will need:

- Remove the cap from the F Style or Cone Top can you wish to use the VFS lid on.
- On the bottom interior of the cap you will see the type, size, and manufacturer.
- The  emblem refers to Rieke style caps, and the  refers to Bericap style caps.

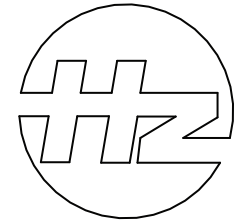

Rieke Style Caps

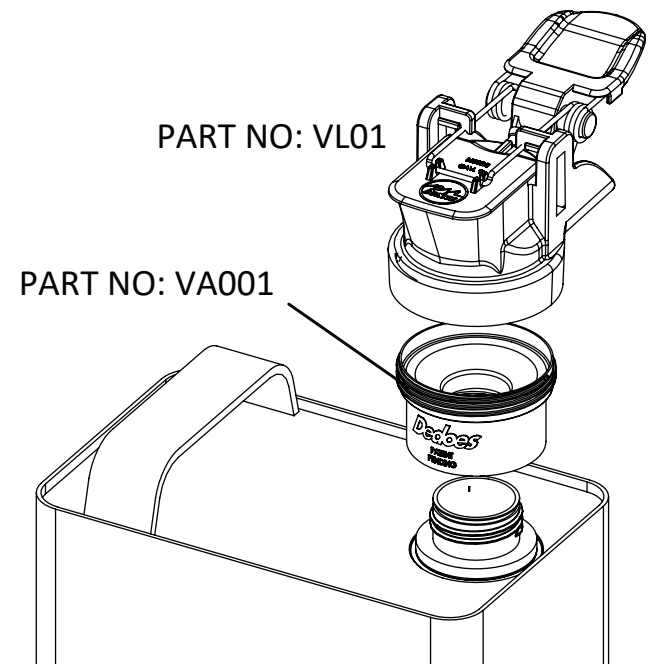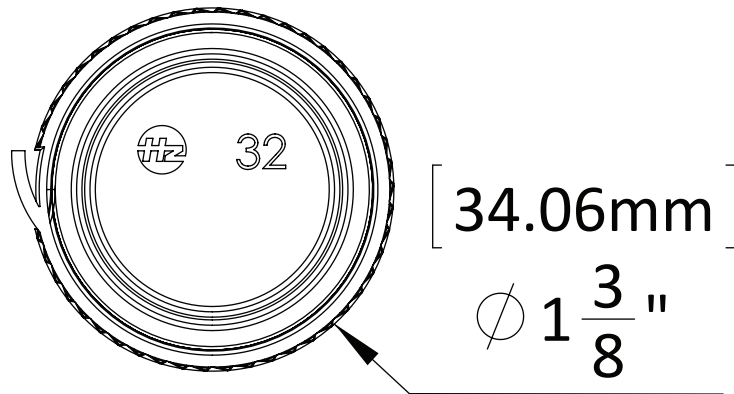

32MM HZ CAP






P# VA002 Variable Flow Spout 32mm Bericap Adapter



To determine which 32mm adapters you will need:

- Remove the cap from the F Style or Cone Top can you wish to use the VFS lid on.
- On the bottom interior of the cap you will see the type, size, and manufacturer.
- The  emblem refers to Rieke style caps, and the  refers to Bericap style caps.

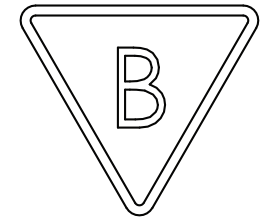

Bericap Style Caps







32MM B CAP

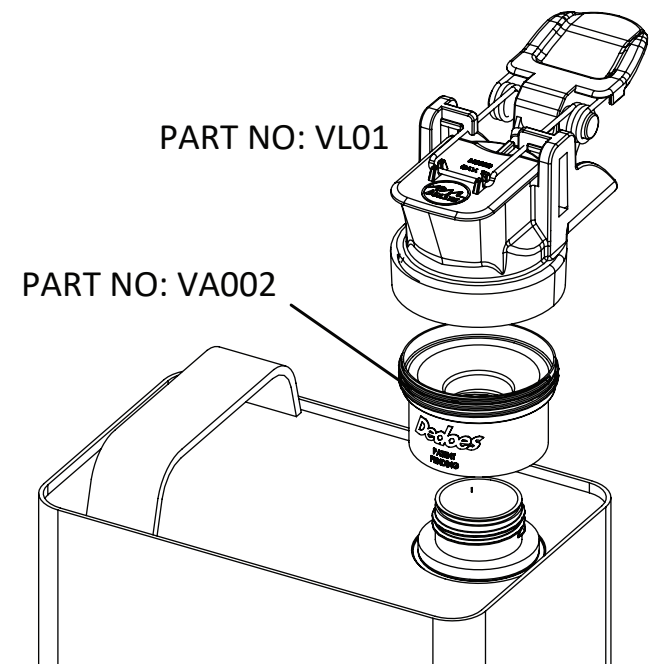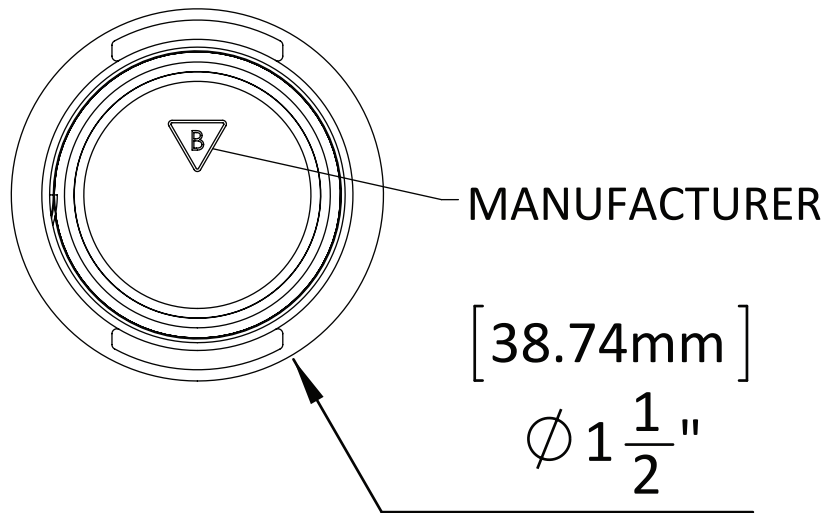




P# VA003 Variable Flow Spout 1.125 Beta Adapter


- Remove the cap from the metal F Style or metal Cone Top can you wish to use the VFS lid on.
- The 1.125 Beta Adapter is designed for use on 1 1/8" Beta Metal Threaded cans.
- The top and bottom of the 1.125 Beta Adapter rotate independently.
- When using an adapter with the VFS Main Lid be sure to securely tighten the adapter and Main lid together before attaching to the container.
- Rotate the bottom section of the Beta Adapter to secure the assembly to the can.

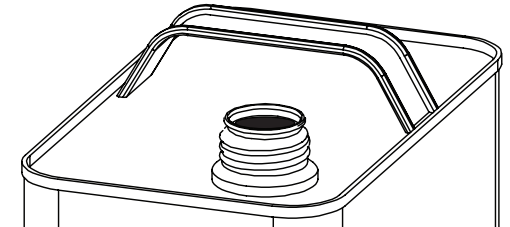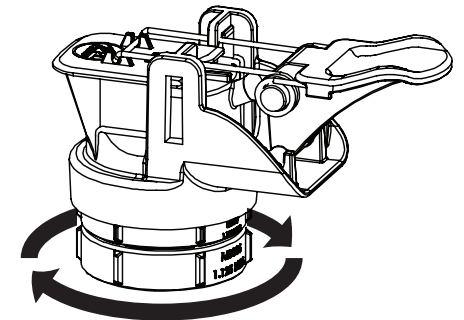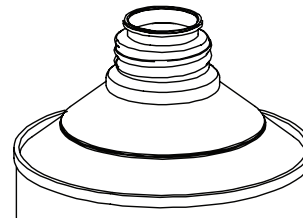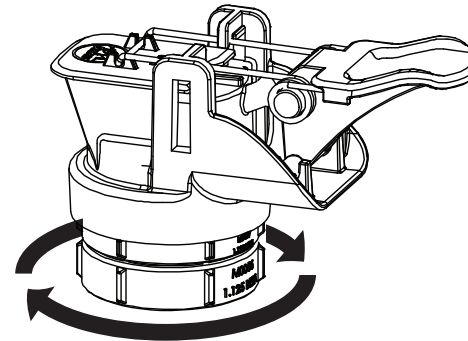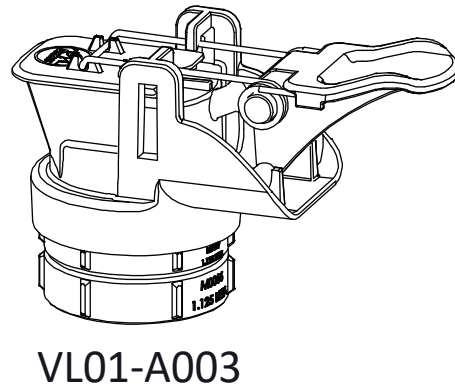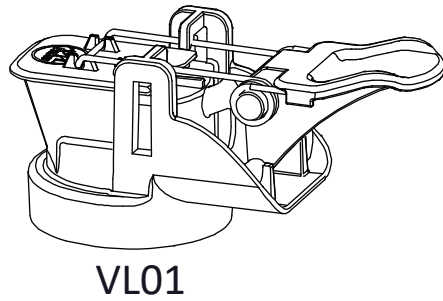




P# VA004 Variable Flow Spout 42mm Rieke Pull Up Adapter

- Remove the cap from the F Style can you wish to use the VFS lid on.
- On the bottom interior of the cap you will see the type, size, and manufacturer.
- The  emblem refers to Rieke style caps.
- The 42mm Pull-Up adapters must be used with the built in pull up spout of the can in the down position.
- Do not pull up the plastic plug pour spout attached to the container.
- Install the VFS Lid and adapter with the pull up spout in the down position.

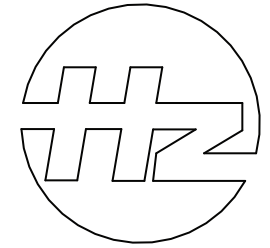


Rieke Style Caps


42MM 402F HZ CAP

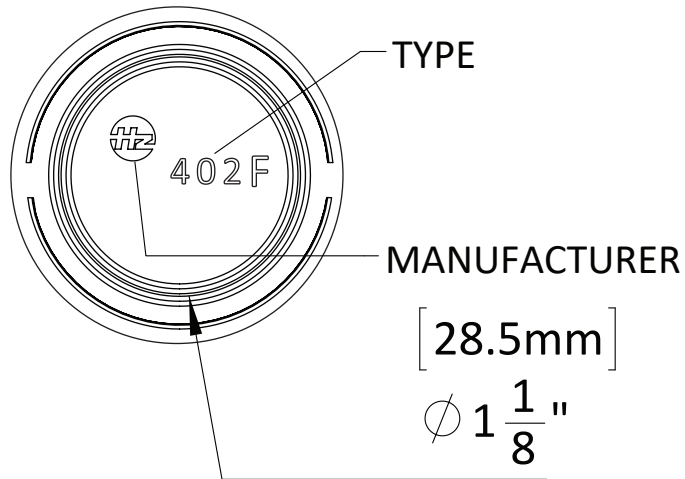


PART NO: VL01

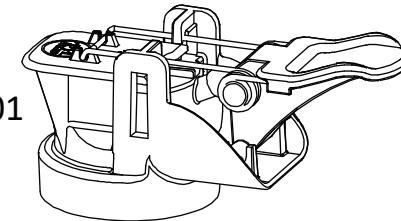

PART NO: VA002

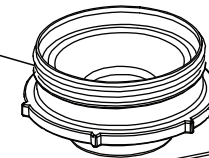

DOWN POSITION

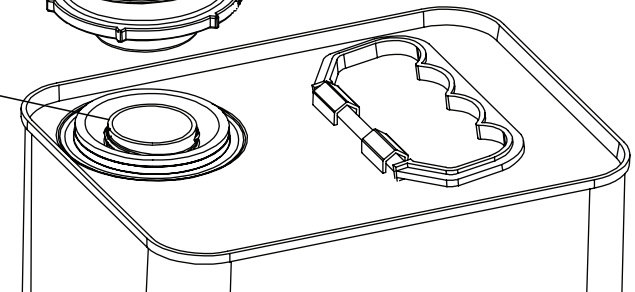


2.5L AND 5L CAN WITH PULL UP CAP



P# VL01-SAM Variable Flow Spout Sample Pack

To determine which adapters you will need Dedoes created a Sample Kit that includes one main lid with one of each adapter available. If you are uncertain which lid and adapter you need this is a great solution to that problem.

PRODUCT NUMBER	DESCRIPTION	BOX QUANTITY	COMPONENT NUMBER(S)	DESCRIPTION
VL01-SAM	Main Lid with One of Each Adapter Sample Kit	1	VL01, VA001, VA002, VA003, & VA004	Sample Kit including one main lid and one of each adapter* (Priced individually, sold in eaches)

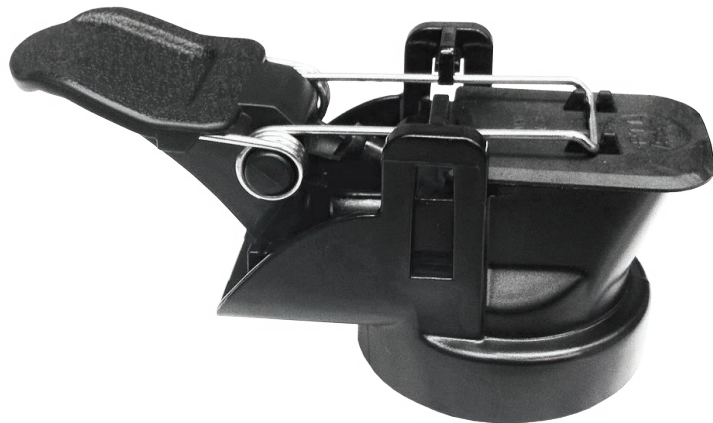

VL01
57mm Main Lid



VA001
32mm Rieke



VA002
32mm Bericap



VA003
1.125" Beta



VA004
42mm Pull-Up
Rieke

*Additional adapters may be included with this kit once they become available.